

SENESE

Cielo / Cielo Sans Deck Mounted Basin Faucet

Installation Guideline

Senese Srl p.iva 01602790527
Loc. Frassi 34, 53011 Castellin in Chianti
senese.com

Cielo Three Hole Lavatory

Deck-Mounted Three-hole Lavatory Faucet

Article

| | |
|-----------------|-----------------------------------|
| Polished Brass | LT04LGCI ON 570 Eur incl. VAT |
| Polished Chrome | LT04LGCI CR 660 Eur incl. VAT |
| Aged Brass | LT04LGCI AB 720 Eur incl. VAT |
| Burnished Brass | LT04LGCI BB 720 Eur incl. VAT |
| Polished Nickel | LT04LGCI NI 720 Eur incl. VAT |
| Satin Nickel | LT04LGCI NS 825 Eur incl. VAT |
| Black Nickel | LT04LGCI NNO 825 Eur incl. VAT |
| Gold | LT04LGCI OR 990 Eur incl. VAT |

Cleaning

Wipe the surface with a soft cloth and lukewarm water and possibly with soap solution. Avoid alkaline, acid-liming or abrasive cleaners. Brass is a material that over time gets a beautiful patina but can be polished with brass polish. Aged and Burnished Brass also gets patina but should not be polished. The galvanized surfaces retain their lustre.

Decalcification

Aerators and shower handles should be regularly decalcified by placing them in a vinegar bath for a couple of hours. Should limescale stains occur, use eucalyptus oil and a soft cloth.

Lubrication

Lubricate only with silicone grease.



Cielo Sans Three Hole Lavatory

Deck-Mounted Three-hole Gooseneck Faucet

Article

| | |
|-----------------|-----------------------------------|
| Polished Brass | LT04LLCS ON 570 Eur incl. VAT |
| Polished Chrome | LT04LLCS CR 660 Eur incl. VAT |
| Aged Brass | LT04LLCS AB 720 Eur incl. VAT |
| Burnished Brass | LT04LLCS BB 720 Eur incl. VAT |
| Polished Nickel | LT04LLCS NI 720 Eur incl. VAT |
| Satin Nickel | LT04LLCS NS 825 Eur incl. VAT |
| Black Nickel | LT04LLCS NNO 825 Eur incl. VAT |
| Gold | LT04LLCS OR 990 Eur incl. VAT |

Cleaning

Wipe the surface with a soft cloth and lukewarm water and possibly with soap solution. Avoid alkaline, acid-liming or abrasive cleaners. Brass is a material that over time gets a beautiful patina but can be polished with brass polish. Aged and Burnished Brass also gets patina but should not be polished. The galvanized surfaces retain their lustre.

Decalcification

Aerators and shower handles should be regularly decalcified by placing them in a vinegar bath for a couple of hours. Should limescale stains occur, use eucalyptus oil and a soft cloth.

Lubrication

Lubricate only with silicone grease.



Installation Guide

Before You Begin

- 1. Turn off the Water Supply**
Ensure all water supply lines are completely shut off before beginning installation.
- 2. Flush Supply Lines**
Run water through the supply lines to clear any debris or sediment. This prevents blockages or damage to internal components of the fixture.
- 3. Isolation Valves**
We recommend installing isolation valves on the hot and cold inlet feeds for easier future maintenance.

Installation Steps:

Positioning the Faucet

- Insert the spout shank through the central hole on the mounting surface. Ensure the gasket is beneath the escutcheon.
- Secure the spout by threading the washers and tightening the nut underneath.
- Required hole diameter: 30 mm.
- Recommended centre-to-centre distance: 100 mm.
- Maximum distance between components: 400 mm.

Installing the Handles




- Insert each handle body through its corresponding hole on the mounting surface.
- Secure using the rubber washer, metal washer, and nut beneath the surface.
- Ensure the handles are aligned correctly for smooth operation.

Connecting Water Supply

- Thread the tee fitting onto the spout shank and tighten securely. Use the provided rubber washer for a proper seal.
- Attach the flexible hoses to the tee and handles. Ensure the connections are tight but avoid over-tightening.

Testing

- Open the faucet and turn the water supply back on.
- Allow water to run through the faucet to flush out any remaining debris.
- Check for any leaks around the connections and handle assembly. Tighten any loose connections as needed.

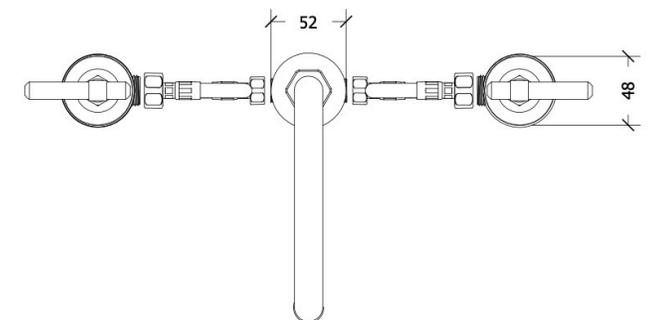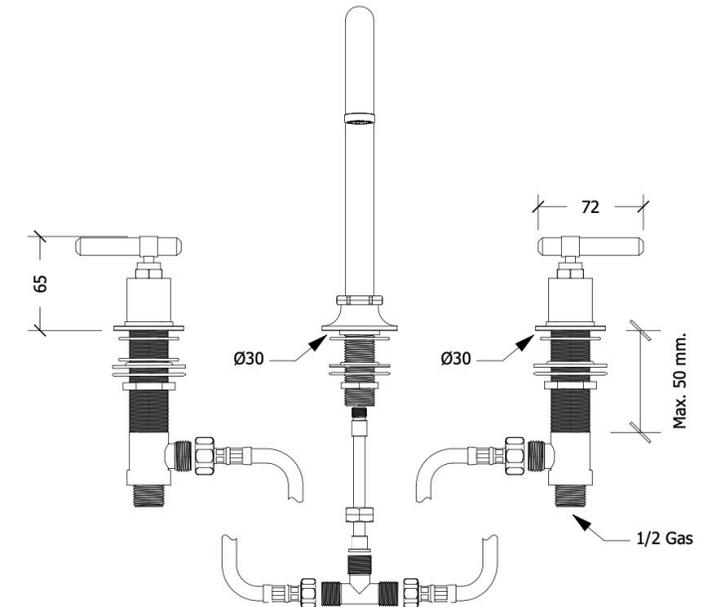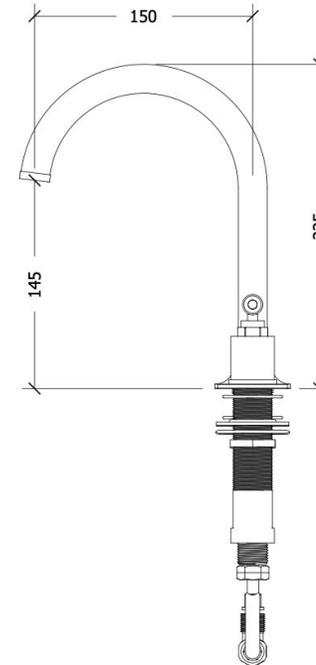

Flowchart
LT04LGCI / LT04LLCS

For assistance or technical questions

service@senese.com
Tel: +39 0577 160 7485
www.senese.com

