

**SENESE**

**Cielo / Cielo Sans Wall Mounted Basin Faucet**

Installation Guideline

## Cielo Three Hole Wall Mount

### Wall-Mounted Three-hole Lavatory Faucet

#### Article

Polished Brass	LP03LGCI ON 530 Eur incl. VAT
Polished Chrome	LP03LGCI CR 630 Eur incl. VAT
Aged Brass	LP03LGCI AB 685 Eur incl. VAT
Burnished Brass	LP03LGCI BB 685 Eur incl. VAT
Polished Nickel	LP03LGCI NI 685 Eur incl. VAT
Satin Nickel	LP03LGCI NS 790 Eur incl. VAT
Black Nickel	LP03LGCI NNO 790 Eur incl. VAT
Gold	LP03LGCI OR 940 Eur incl. VAT



## Cielo Sans Three Hole Wall Mount

### Wall-Mounted Three-Hole Lavatory Faucet

#### Article

Polished Brass	LT05LLCS ON 595 Eur incl. VAT
Polished Chrome	LT05LLCS CR 710 Eur incl. VAT
Aged Brass	LT05LLCS AB 760 Eur incl. VAT
Burnished Brass	LT05LLCS BB 760 Eur incl. VAT
Polished Nickel	LT05LLCS NI 760 Eur incl. VAT
Satin Nickel	LT05LLCS NS 880 Eur incl. VAT
Black Nickel	LT05LLCS NNO 880 Eur incl. VAT
Gold	LT05LLCS OR 1.060 Eur incl. VAT



## Installation Guide

### Before You Begin

- 1. Turn off the Water Supply**  
Ensure all water supply lines are completely shut off before beginning installation.
- 2. Flush Supply Lines**  
Run water through the supply lines to **clear any debris or sediment**. This prevents blockages or damage to internal components of the fixture.
- 3. Isolation Valves**  
We recommend installing isolation valves on the hot and cold inlet feeds for easier future maintenance.

### Installation Steps:

#### Mounting the Faucet Body

- Attach the built-in faucet body to the wall, ensuring it is level.
- Follow the provided drawing instructions to respect the minimum and maximum tolerance to the finished wall.

#### Connecting the Water Supply


- Connect the hot and cold-water supply lines to the corresponding inlets on the faucet body.
- The hot supply should be connected to the left side when viewing the faucet from the front.

#### Securing the Handles and Spout

- Install the spout by threading it into the faucet body. Ensure it is aligned correctly with the sink.
- Attach the handles to the valve cartridges by screwing them into place. Ensure they are aligned correctly for proper operation.

#### Testing

- Open the faucet and turn the water supply back on.
- Allow water to run through the faucet to flush out any remaining debris.
- Check for any leaks around the connections and handle assembly. Tighten any loose connections as needed.

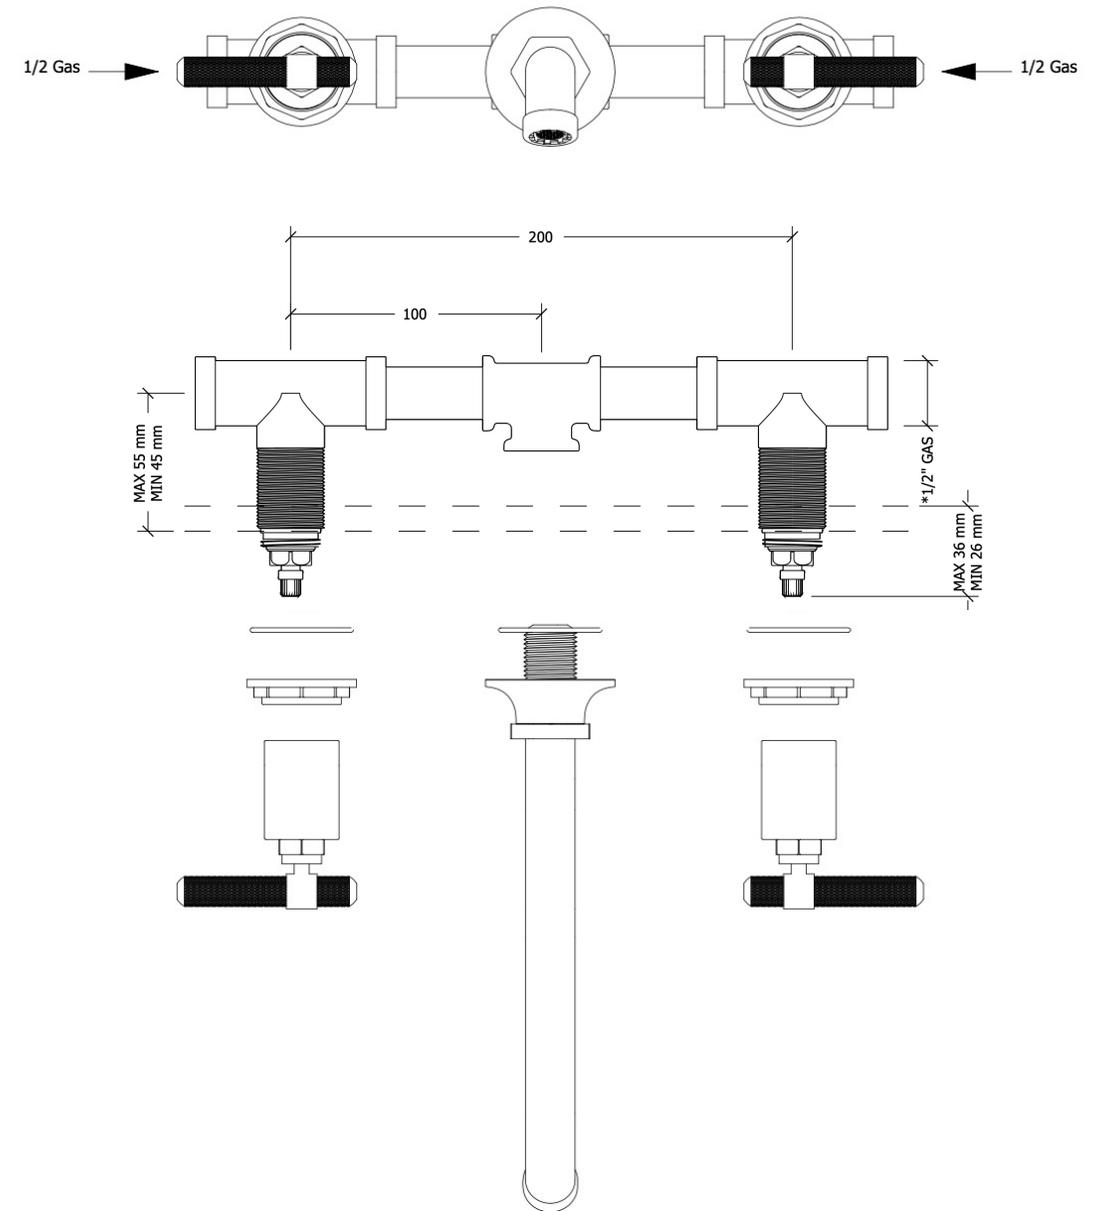

1/2" NPT Connections supplied for Installations in the US and Canada

## Post-Installation Care

### Cleaning and Maintenance





Regularly clean the faucet surface with a soft cloth, lukewarm water, and mild soap. Avoid using harsh chemicals or abrasive materials. For brass finishes, use brass polish to maintain shine, except for aged or burnished brass which should not be polished.

### Aerator

To prevent limescale buildup, immerse aerator in vinegar for a few hours, then rinse. Use vinegar on a soft cloth to remove limescale stains.

### Lubrication

Use only silicone grease for lubrication when needed.

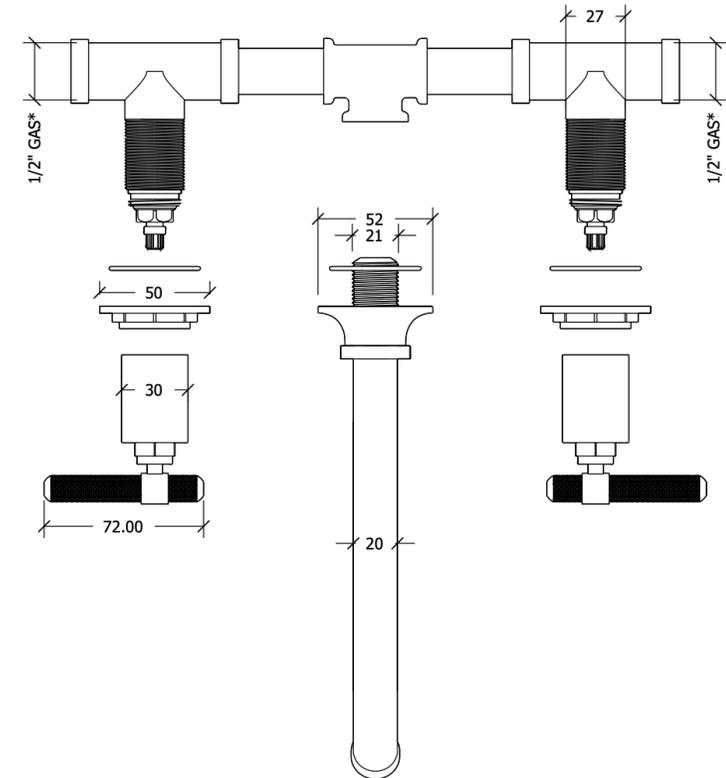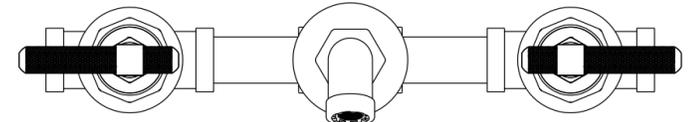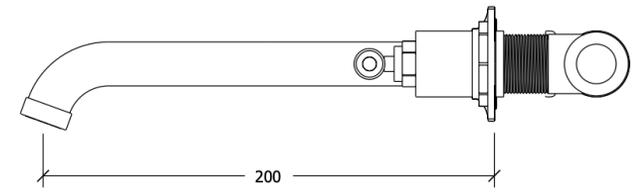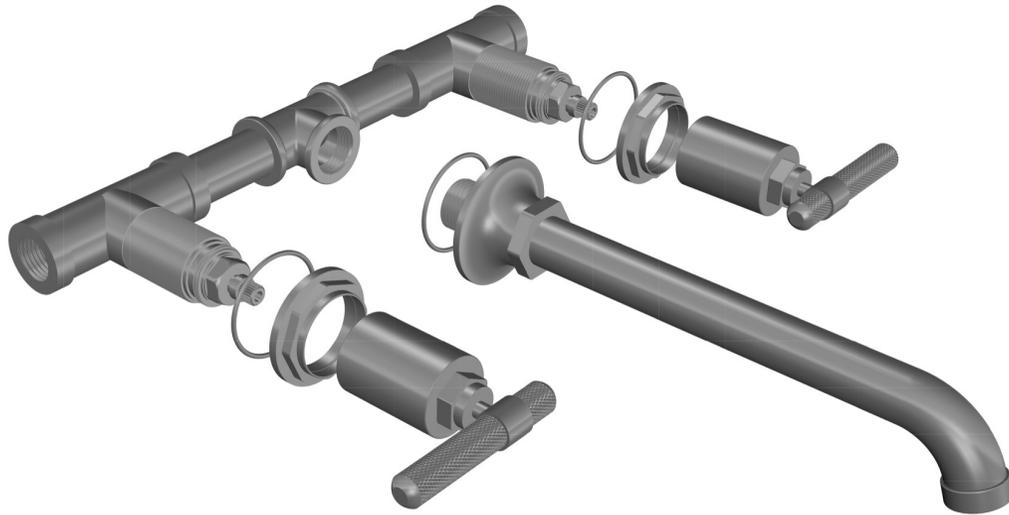

1/2" NPT Connections supplied for Installations in the US and Canada

**For assistance or technical questions**

service@senese.com  
Tel: +39 0577 160 7485  
www.senese.com

