

SENESE

Farfalla Wall-Mounted Basin Faucet

Specification and Installation Guide

Farfalla Wall Mounted

Wall-Mounted Three-Hole Lavatory Faucet with Butterfly Handles

Article

Polished Brass	LP03FA ON
Polished Chrome	LP03FA CR
Aged Brass	LP03FA AB
Burnished Brass	LP03FA BB
Satin Nickel	LP03FA NS
Black Nickel	LP03FA NNO
Gold	LP03FA OR



Installation Guide

Before You Begin

Turn Off the Water Supply

Shut off the hot- and cold-water supplies completely before beginning installation.

Flush the Supply Lines

Thoroughly flush both supply lines before connecting the faucet. Debris may damage internal components or restrict the flow.

Isolation Valves

Install accessible isolation valves on both inlet feeds for future servicing.

Installation Steps

Mount the Concealed Faucet Body

Secure the built-in faucet body firmly within the wall, ensuring it is level. Observe the minimum and maximum installation tolerances shown in the drawing, measured from the finished wall surface.

Connect the Water Supplies

Connect the hot supply to the left inlet and the cold supply to the right inlet when facing the faucet. Check the connections for leaks before closing the wall.


Fit the Spout and Handles

Thread the spout into the faucet body and align it with the basin. Attach the butterfly handles to the valve cartridges and align them correctly for operation.

Testing and Commissioning

Restore the water supplies slowly and open the faucet. Flush thoroughly and check the connections and handle assemblies for leaks. Tighten any loose connections as needed.

First-Fix Installation

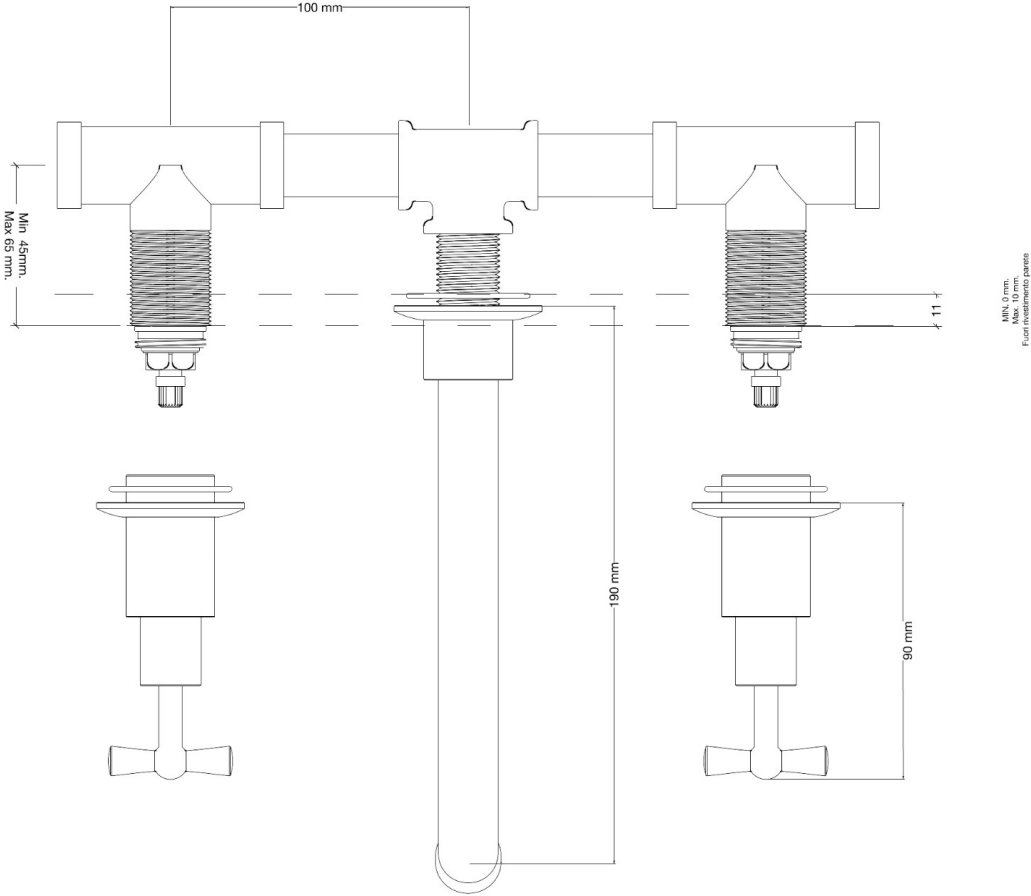

All dimensions in millimetres

Post-Installation Care

Cleaning and Maintenance

Clean with a soft cloth, lukewarm water and a mild, neutral soap. Do not use abrasive products or cleaners containing acids, alkalis or bleach. Dry with a soft cloth after cleaning.

Brass Finishes

Unlacquered brass finishes naturally develop a patina. Brass polish may be used on unlacquered Polished Brass only. Do not polish Aged Brass, Burnished Brass or plated finishes.

Aerator Maintenance

Periodically check the aerator for debris or limescale. Remove and clean it carefully, rinse thoroughly and refit.

Lubrication

Use only silicone grease where lubrication is required.

For assistance or technical questions

service@senese.com
Tel: +39 0577 160 7485
www.senese.com

Spout and Handle Assembly

