

SENESE

Cielo Aureo / Cielo Sans Deck Mounted Basin Faucet

Specification and Installation Guide

Cielo Aureo Three Hole Lavatory

Deck-Mounted Three-Hole Lavatory Faucet

Article

Polished Brass	LT04LGCI ON
Polished Chrome	LT04LGCI CR
Aged Brass	LT04LGCI AB
Burnished Brass	LT04LGCI BB
Polished Nickel	LT04LGCI NI
Satin Nickel	LT04LGCI NS
Polished Black Nickel	LT04LGCI>NNL
24k Gold	LT04LGCI OR



Cielo Sans Three Hole Lavatory

Deck-Mounted Three-Hole Gooseneck Faucet

Article

Polished Brass	LT04LLCS ON
Polished Chrome	LT04LLCS CR
Aged Brass	LT04LLCS AB
Burnished Brass	LT04LLCS BB
Polished Nickel	LT04LLCS NI
Satin Nickel	LT04LLCS NS
Polished Black Nickel	LT04LLCS NNL
24k Gold	LT04LLCS OR



Installation Guide

Before You Begin

- 1. Turn off the Water Supply**
Ensure all water supply lines are completely shut off before beginning installation.
- 2. Flush Supply Lines**
Important: Thoroughly flush the hot- and cold-water supply lines before connecting the faucet. Debris left in the pipework may damage or obstruct the cartridges and aerator.
- 3. Isolation Valves**
We recommend installing isolation valves on the hot and cold inlet feeds for easier future maintenance.

Installation Steps:

Position and Secure the Spout

- Insert the spout shank through the central mounting hole. Ensure the gasket is beneath the escutcheon.
- Secure using the rubber washer, metal washer and nut beneath the surface. Do not overtighten.
- Required hole diameter: Ø30 mm for each component.
- Recommended centre-to-centre distance: 100 mm.
- Maximum distance between components: 400 mm.

Position and Secure the Handles


- Insert each handle body through its corresponding mounting hole. Ensure the gasket is beneath each escutcheon.
- Secure each body using the rubber washer, metal washer and nut beneath the surface. Do not overtighten.
- Align both handles symmetrically in the closed position.

Connect the Water Supply

- Thread the tee fitting onto the spout shank using the supplied rubber washer and tighten securely.
- Connect the flexible mixer hoses between the tee fitting and the two handle bodies. Connect the hot- and cold-water supply hoses to the corresponding handle inlets. Tighten securely without overtightening.

Testing

- Remove the aerator. Open both handles, then slowly turn the water supplies back on.
- Allow water to run for several minutes, then refit the aerator.
- Inspect all connections for leaks and tighten carefully if necessary. Confirm that all three components are secure and that the gaskets seal correctly against the mounting surface.

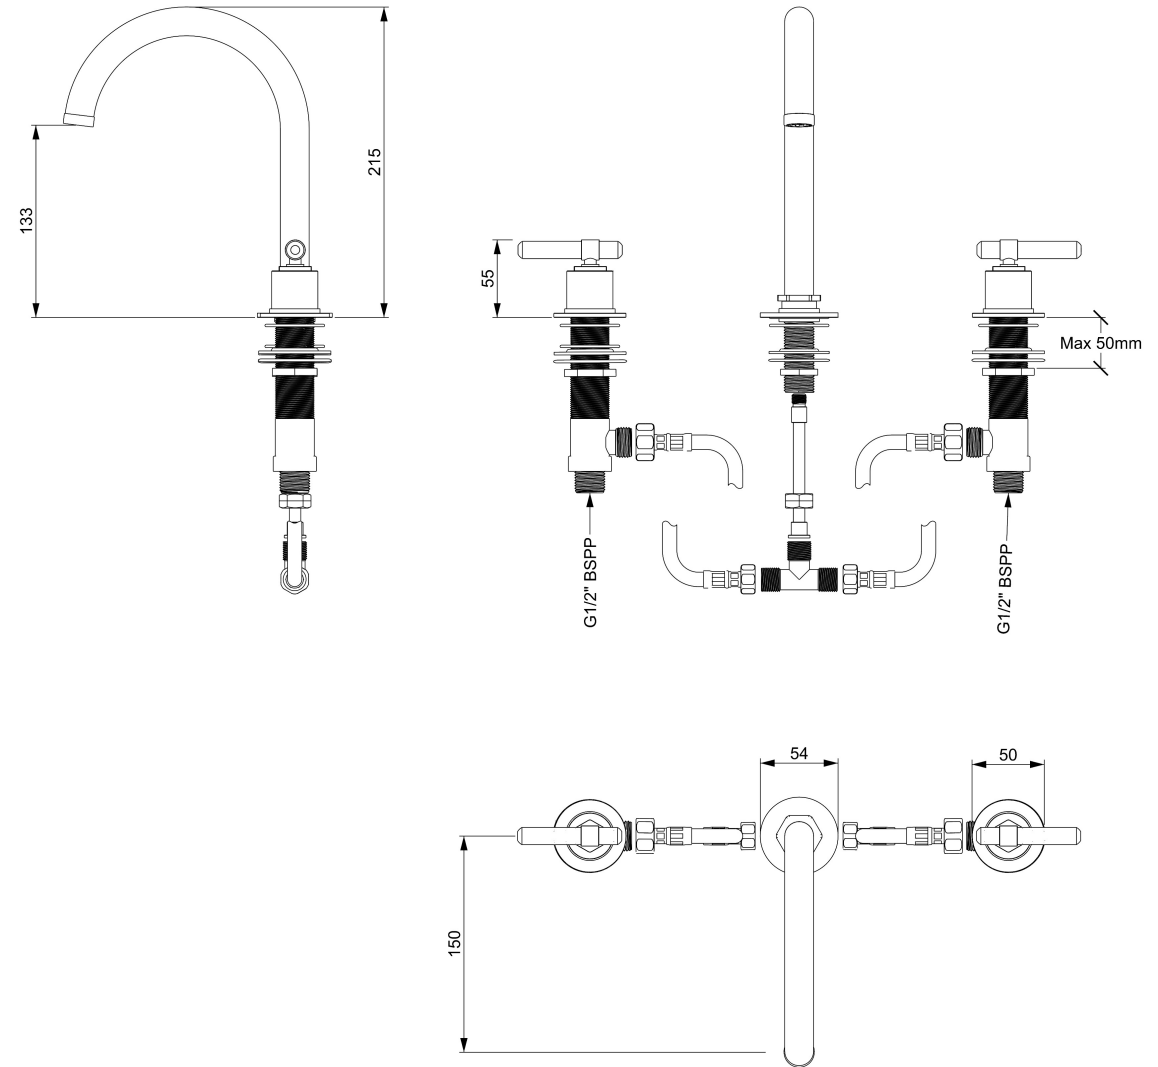

US / Canada: 3/8-inch OD compression supply hoses supplied

Technical Data

Operating pressure 1.5–4.5 bar recommended
Required mounting holes 3 × Ø30 mm
Connection Flexible hot- and cold-water supply hoses
US / Canada 3/8-inch OD compression supply hoses supplied

Measured Flow
3.0 bar 10.5 L/min

Indicative Flow Performance
1.5 bar 7.3 L/min
2.0 bar 8.5 L/min
2.5 bar 9.5 L/min
3.0 bar 10.5 L/min
3.5 bar 11.0 L/min
4.0 bar 11.5 L/min
4.5 bar 12.0 L/min

Flow rates are indicative and may vary according to installation conditions, water temperature and local supply characteristics.


Cleaning
Wipe the surface with a soft cloth and lukewarm water and possibly with soap solution. Avoid alkaline, acid-liming or abrasive cleaners. Brass is a material that over time gets a beautiful patina but can be polished with brass polish. Aged and Burnished Brass also gets patina but should not be polished. The galvanized surfaces retain their lustre.

Decalcification
Aerators and shower handles should be regularly decalcified by placing them in a vinegar bath for a couple of hours. Should limescale stains occur, use eucalyptus oil and a soft cloth.

Lubrication
Lubricate only with silicone grease.

For assistance or technical questions

service@senese.com
Tel: +39 0577 160 7485
www.senese.com

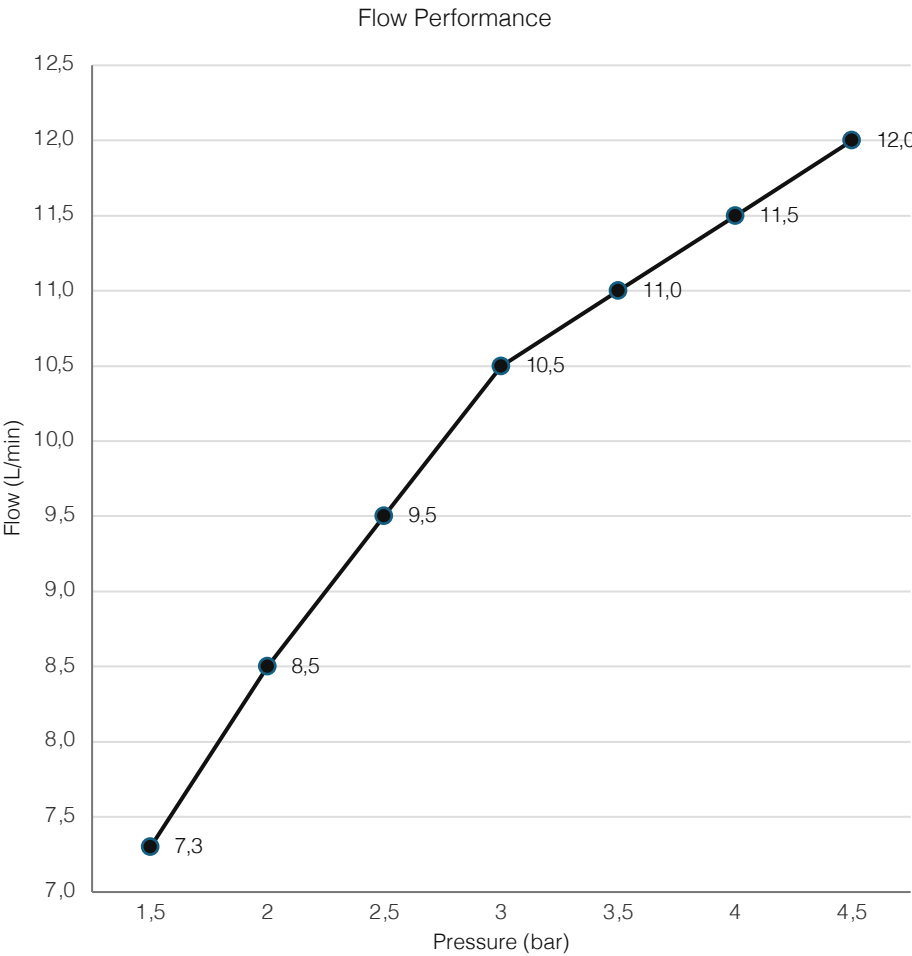

Measured flow of 10.5 L/min at 3.0 bar