

SENESE

Cielo Aureo / Cielo Sans Thermostatic Shower Control

Specification and Installation Guide

Cielo Aureo Thermostatic Shower Control

Thermostatic Shower Control with 3-way Diverter

Article

Polished Brass	TERPR3LGCI ON
Polished Chrome	TERPR3LGCI CR
Aged Brass	TERPR3LGCI AB
Cold Aged Brass	TERPR3LGCI ABF
Burnished Brass	TERPR3LGCI BB
Polished Nickel	TERPR3LGCI NI
Satin Nickel	TERPR3LGCI NS
Black Nickel	TERPR3LGCI NNO
English Gold	TERPR3LGCI OI
Gold	TERPR3LGCI OR



Cielo Sans Thermostatic Shower Control

Thermostatic Shower Control with 3-way Diverter

Article

Polished Brass	TERRD3LLCS ON
Polished Chrome	TERRD3LLCS CR
Aged Brass	TERRD3LLCS AB
Cold Aged Brass	TERRD3LLCS ABF
Burnished Brass	TERRD3LLCS BB
Polished Nickel	TERRD3LLCS NI
Satin Nickel	TERRD3LLCS NS
Black Nickel	TERRD3LLCS NNO
English Gold	TERRD3LLCS OI
Gold	TERRD3LLCS OR



Installation Guide

Before You Begin

Isolate and Flush the Supplies

Shut off both water supplies. Flush the hot- and cold-water pipework thoroughly before connecting the valve. Install accessible isolation valves on both inlet feeds for future servicing.

Mount the Concealed Body

Secure the body rigidly within the wall, level and correctly oriented. Connect the hot supply on the left and the cold supply on the right when viewed from the front. Check the supplied body against the finished-wall position and first-fix drawing on page 5 before fixing.

Connect the Outlets



Identify both outlet ports from the markings on the supplied body. Connect the shower rose and hand shower to their designated outlets. Record which outlet corresponds to position I and position II during commissioning. Use an approved thread sealant where required. Tighten securely without overtightening. Check all concealed connections for leaks before closing the wall.

Fit the Plate and Handles

Fit the cover plate against the finished wall and seal. Apply sanitary-grade silicone only. Fit and align the handles with the plate markings, then secure them using the supplied fixings. Confirm that both controls move freely. Do not use gripping tools on finished surfaces.

Test and Commission

Restore both supplies slowly. Flush and test each connected outlet. Check for leaks, verify the diverter positions and confirm that position 0 shuts off the flow. Verify correct hot-to-cold adjustment.

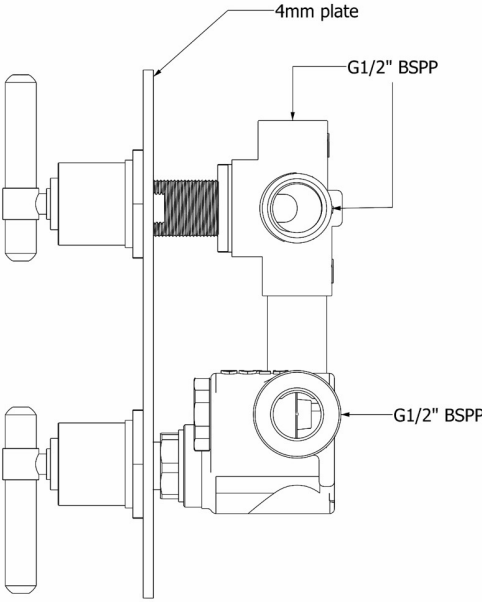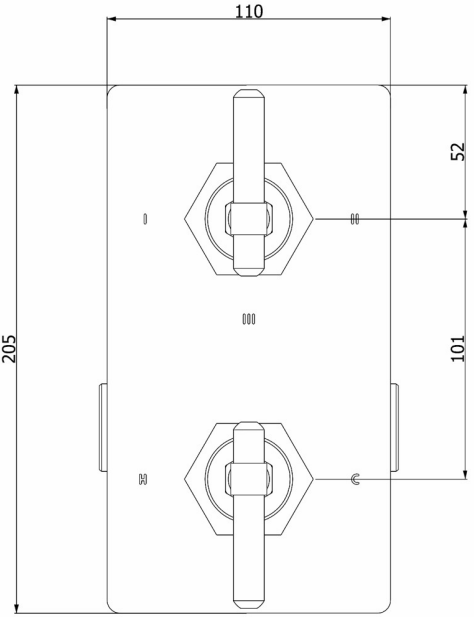

Operation and Post-Installation Care

Diverter Control — Upper Handle

Use the upper handle to select outlet I or outlet II. Return it to position 0 to turn the water off. Confirm the connected outlet for each position during commissioning.

Temperature Control — Lower Handle

Use the lower handle to adjust the mixed-water temperature towards H (hotter) or C (colder), following the plate markings. Check the water temperature before use.

Cleaning and Maintenance

Clean with a soft cloth, lukewarm water and mild, neutral soap. Rinse and dry with a soft cloth. Do not use abrasive products or cleaners containing acids, alkalis or bleach. Unlacquered brass naturally develops a patina.

Connected Shower Outlets


Check the connected shower rose and hand shower periodically for debris or limescale. Follow the maintenance instructions supplied with those fittings.

Thermostatic Cartridge and Filters

If temperature control becomes irregular, check the supplies and inlet filters. Isolate both supplies before removing any filter, cartridge or control component.

Lubrication

Where lubrication is required, use silicone grease suitable for the supplied seals and potable-water fittings.

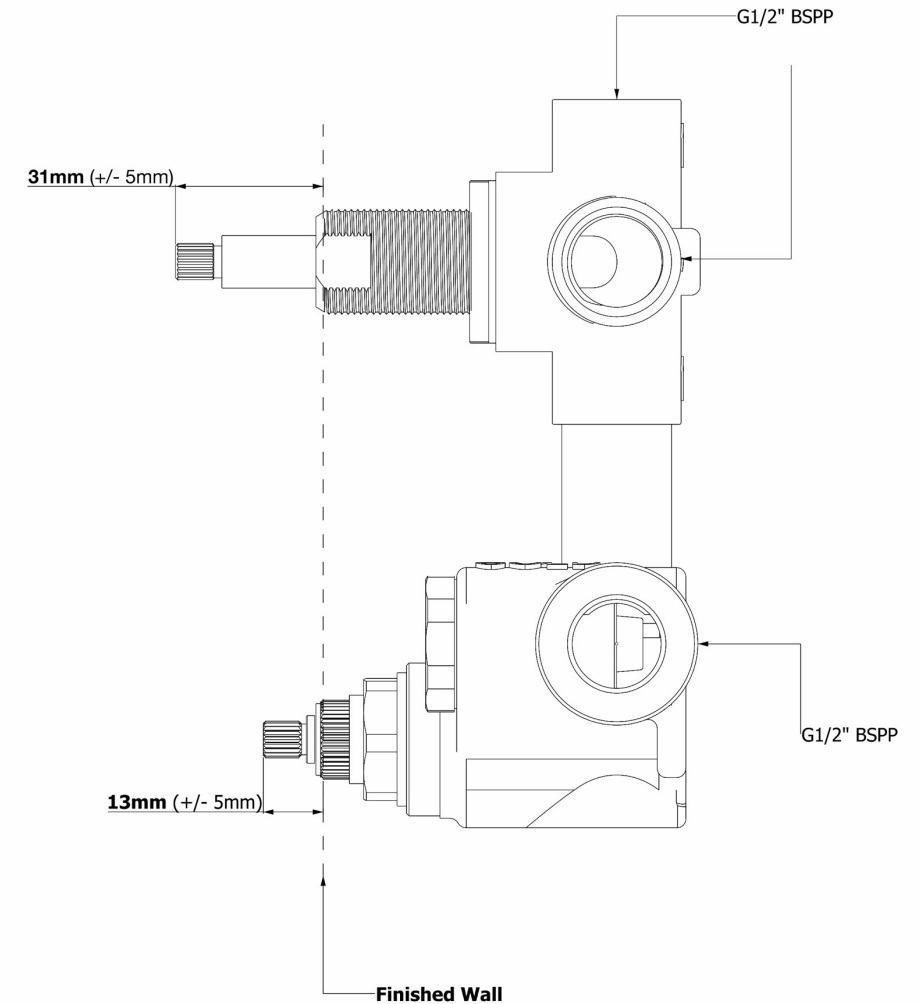

All dimensions in millimetres

Technical Data & Flow Performance

Product
Cielo Aureo / Cielo Sans
Thermostatic Shower Control with 2-Way Diverter
Cielo Aureo: TERPR2LGCI
Cielo Sans: TERRD2LLCS

Technical data
Recommended operating pressure: 1.5–4.5 bar
Connections: 1/2" BSPP
Diverter: 2-way
US / Canada connection: 1/2" NPT adapters supplied

Measured unrestricted flow
3.0 bar: 18.0 L/min
4.0 bar: 22.0 L/min

Values between measured points are indicative and may vary depending on the selected outlet and installation conditions.

For assistance or technical questions

service@senese.com
Tel: +39 0577 160 7485
www.senese.com

