

SENESE

Farfalla Concealed Shower Set

Specification and Installation Guide

Farfalla Concealed Shower Set

Concealed Shower Set with Butterfly Handles and Hand Shower

Article	
Polished Brass	DS200DFA ON
Polished Chrome	DS200DFA CR
Aged Brass	DS200DFA AB
Cold Aged Brass	DS200DFA ABF
Burnished Brass	DS200DFA BB
Polished Nickel	DS200DFA NI
Satin Nickel	DS200DFA NS
English Gold	DS200DFA ENG
Gold	DS200DFA OR



Installation Guide

Before You Begin

Turn Off the Water Supply

Shut off the hot- and cold-water supplies completely before beginning installation.

Flush the Supply Lines

Thoroughly flush both supply lines before connecting the concealed body. Debris may damage the ceramic cartridges, obstruct the diverter or restrict the flow.

Isolation Valves

Install accessible isolation valves on both inlet feeds for future servicing.

Installation Steps

Mount the Concealed Body

Rigidly secure the concealed body to suitable structural support, ensuring that it is level and correctly oriented. The hot-water connection must be on the left and the cold-water connection on the right when viewed from the front.

Important: Position the concealed body within the 40–55 mm installation range shown relative to the finished wall. Confirm the installation depth and orientation against the supplied technical drawing before closing the wall.

Connect the Outlets

Connect the top outlet to the shower rose and the bottom outlet to the hand shower. Use approved 1/2" BSPP pipework and thread sealant where required. Tighten each connection securely without overtightening.

Pressure Test

Pressure-test every concealed joint and confirm correct flow to both outlets before closing the wall.


Install the Escutcheons and Controls

Fit the escutcheons against the finished wall, applying sanitary-grade silicone behind them where required. Install the butterfly handles and diverter control, then tighten the retaining screws carefully. Do not use gripping tools on finished surfaces.

Testing and Commissioning

Restore the supplies slowly. Flush and test both outlets, confirm correct hot and cold operation and inspect every connection for leaks.

Technical Drawing

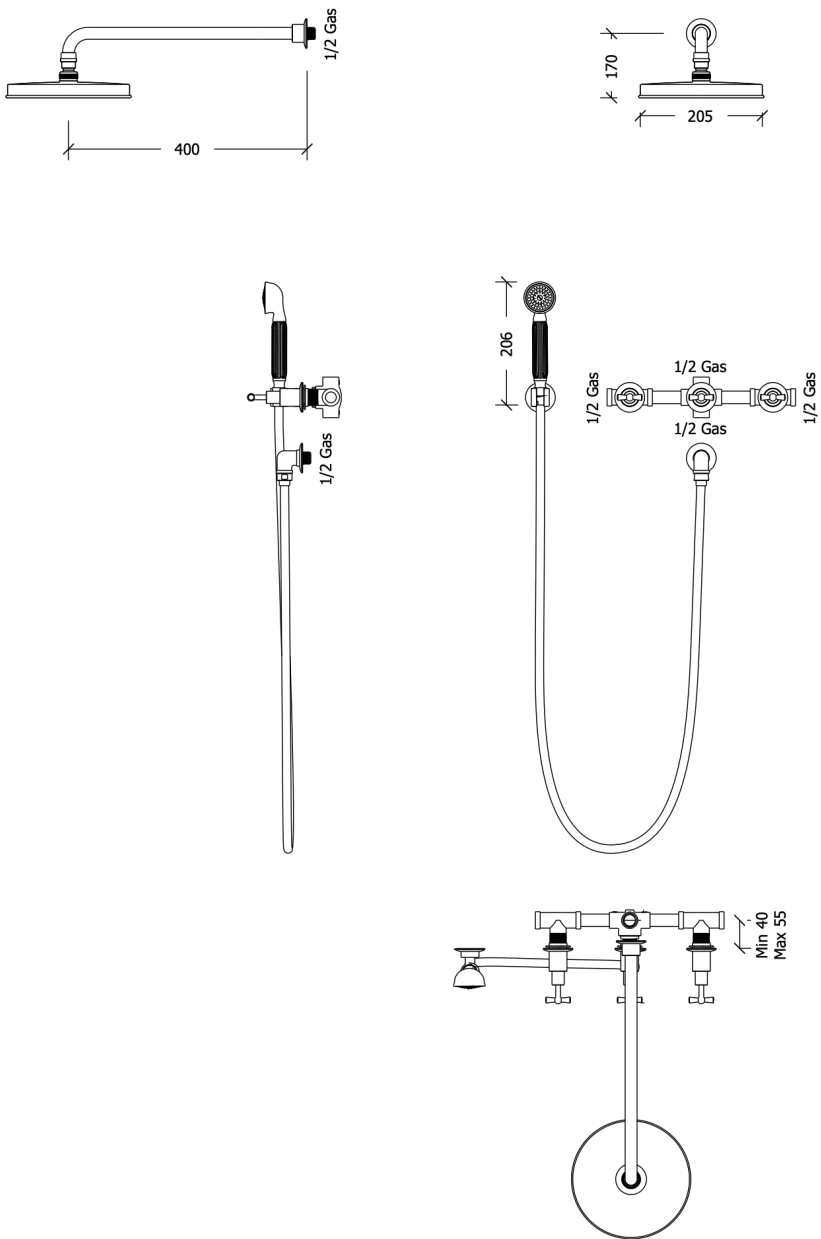

1/2" NPT adapters supplied for installations in the US and Canada

Post-Installation Care

Cleaning and Maintenance

Clean with a soft cloth, lukewarm water and a mild, pH-neutral soap. Do not use abrasive products or cleaners containing acids, alkalis or bleach. Unlacquered brass finishes will naturally develop a patina. This is a characteristic of the material and not a defect. Do not polish aged or burnished finishes unless specifically instructed by Senese.

Shower Rose and Hand-Shower Maintenance


Periodically check both outlets for debris or limescale. Remove and clean accessible nozzles and components carefully, then rinse thoroughly before refitting.

Controls and Cartridges

If the controls become stiff or the flow becomes irregular, check the supply pressures and inlet filters before servicing the cartridges.

Lubrication

Use only silicone grease where lubrication is required.

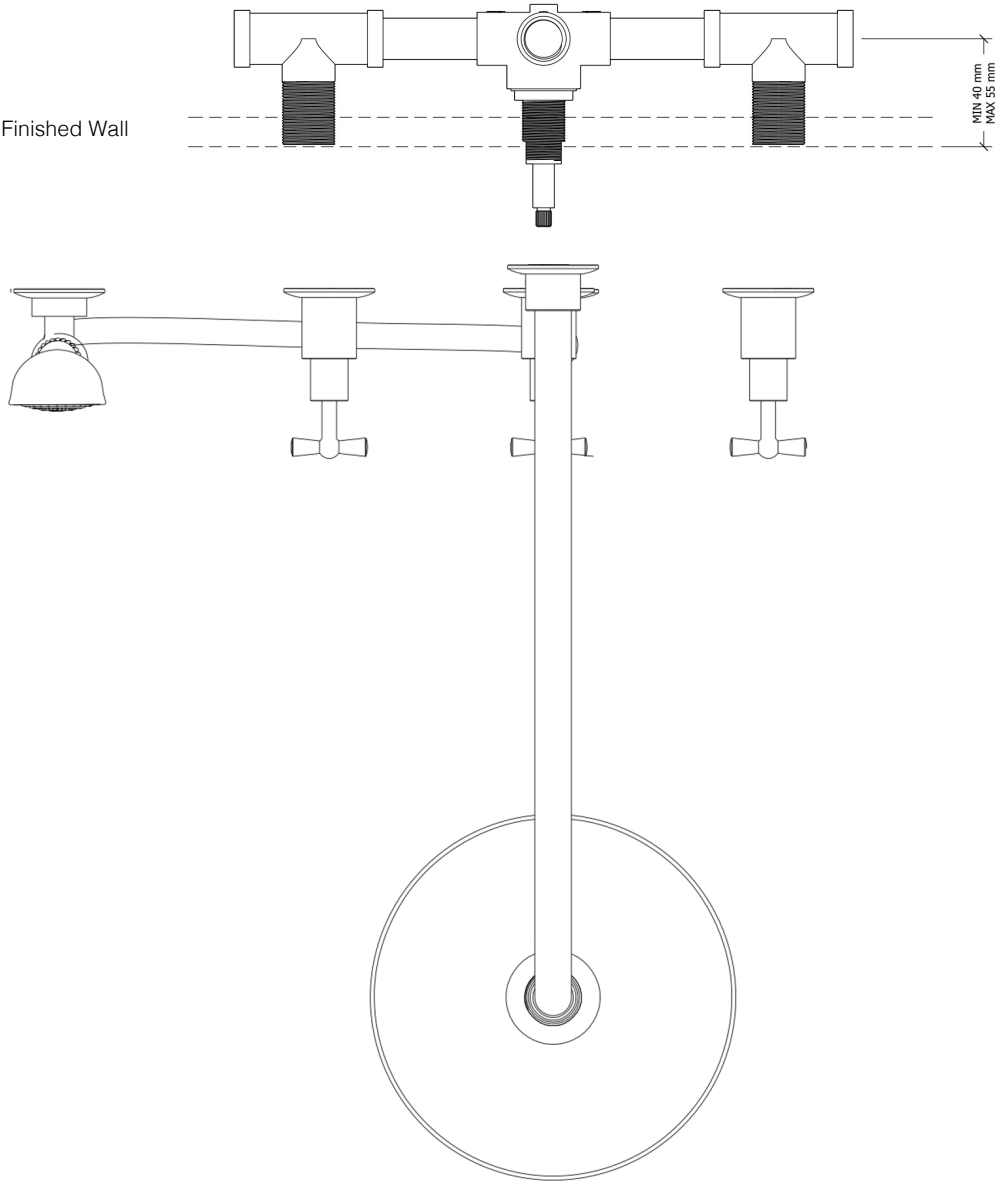

All dimensions in millimetres

Technical Data & Flow Performance

Product
Farfalla Concealed Shower Set
Article: DS200DFA

Technical data
Recommended operating pressure: 1.5–4.5 bar
Connections: 1/2" BSPP
Diverter: 2-way
US / Canada connection: 1/2" NPT adapters supplied

Measured flow with regulator
3.0 bar: 9.0 L/min
4.0 bar: 9.5 L/min

First-fix tolerance
Concealed body: 40–55 mm relative to the finished wall, as shown in the technical drawing

Values between measured points may vary depending on the selected outlet and installation conditions.

For assistance or technical questions

service@senese.com
Tel: +39 0577 160 7485
www.senese.com

