

**SENESE**

**Vanity Suite**

Installation Guideline

## Vanity Suite Verde Guatemala

### Article

Verde Guatemala	DBSSKSVG60 600 x 490 x 850 mm
Bianco di Carrara	DBSSKSC60 600 x 490 x 850 mm
Nero Marquina	DBSSKSNM60 600 x 490 x 850 mm
Bardiglio	DBSSKSB60 600 x 490 x 850 mm

### Cleaning | Marble Surfaces

Clean the surface using a non-abrasive, mild soap or a pH-neutral cleanser. Avoid bleach, ammonia, vinegar, alcohol, window cleaners, lemon juice, or any abrasive cleaning products. Likewise, do not use abrasive pads, steel wool, metal brushes, or scouring pads.

Over time, water may cause mineral deposits to form. To prevent damage when installing drains or fittings on marble countertops, always use 100% silicone or a marble-safe plumber's sealant.

For added protection and maintenance, the sink can be treated with a stone protection product such as **FILA WET ECO**.

### Cleaning | Brass

Wipe the surface with a soft cloth and lukewarm water and possibly with soap solution. Avoid alkaline, acid-liming or abrasive cleaners. Brass is a material that over time gets a beautiful patina but can be polished with brass polish. Aged and Burnished Brass also gets patina but should not be polished. The galvanized surfaces retain their lustre



## Installation Guide for Vanity Suite

### 1. Preparation

**Unbox and Inspect:** Carefully unpack the vanity and sink, checking all parts for any damage.

**Installation Area:** Choose a flat, stable location that can support the weight of the vanity. Ensure the area is dry, clean, and free of dust or debris.

### 2. Mounting the Vanity Console

**Assemble the Vanity Structure:** Carefully assemble all parts of the vanity by screwing them together by hand. Avoid using gripping tools that could scratch or damage the surface finish.

**Mark Placement:** Position the assembled vanity against the wall where it will be installed. Use a level to ensure it is straight and mark the locations for the wall bracket, level to the top edge of the vanity structure.

**Drill Holes:** Make holes for the wall bracket and the vanity structure wall attachments.

**Attach Brackets:** Secure the brackets and wall attachments to the wall with screws, ensuring it is firmly attached and level.

### 3. Installing the Sink

**Apply Silicone Sealant:** Apply a thin bead of 100% silicone or marble-safe sealant on the top edge of the vanity structure, on the wall bracket and against the wall where the sink will sit.

**Position the Sink:** Gently place the marble sink onto the vanity structure and , aligning it properly. Press down gently to bond the sink to the sealant.

**Position the Splash Back:** Apply a thin bead of 100% silicone or marble-safe sealant on the back of the splash back and against the wall. Gently push into place.

### 4. Connecting the Plumbing


**Install Drain Fittings:** Use only 100% silicone or marble-safe sealants when installing drain fittings to avoid damaging the marble. Senese drain fittings does not require sealants.

**Connect Water Supply Lines:** Attach the water supply lines to the faucet according to the manufacturer's instructions. Tighten all connections securely to prevent leaks.


### 5. Final Checks and Cleaning

**Inspect Installation:** Verify that the vanity is level and securely mounted. Check all plumbing connections for tightness and leaks.


**Clean the Marble Surface:** Clean the sink with a non-abrasive, mild soap or pH-neutral cleanser. Avoid using bleach, ammonia, vinegar, alcohol, or abrasive pads that could damage the marble.

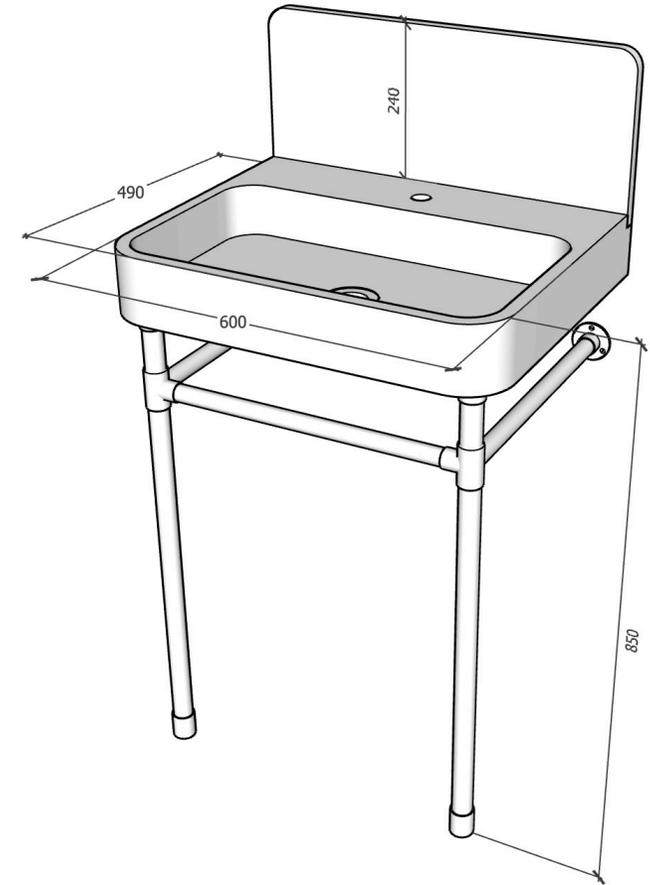


Top View

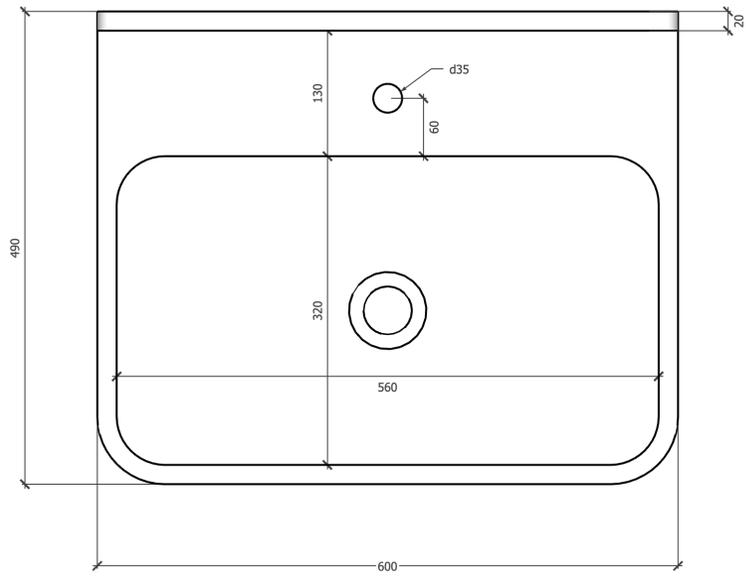


Front View

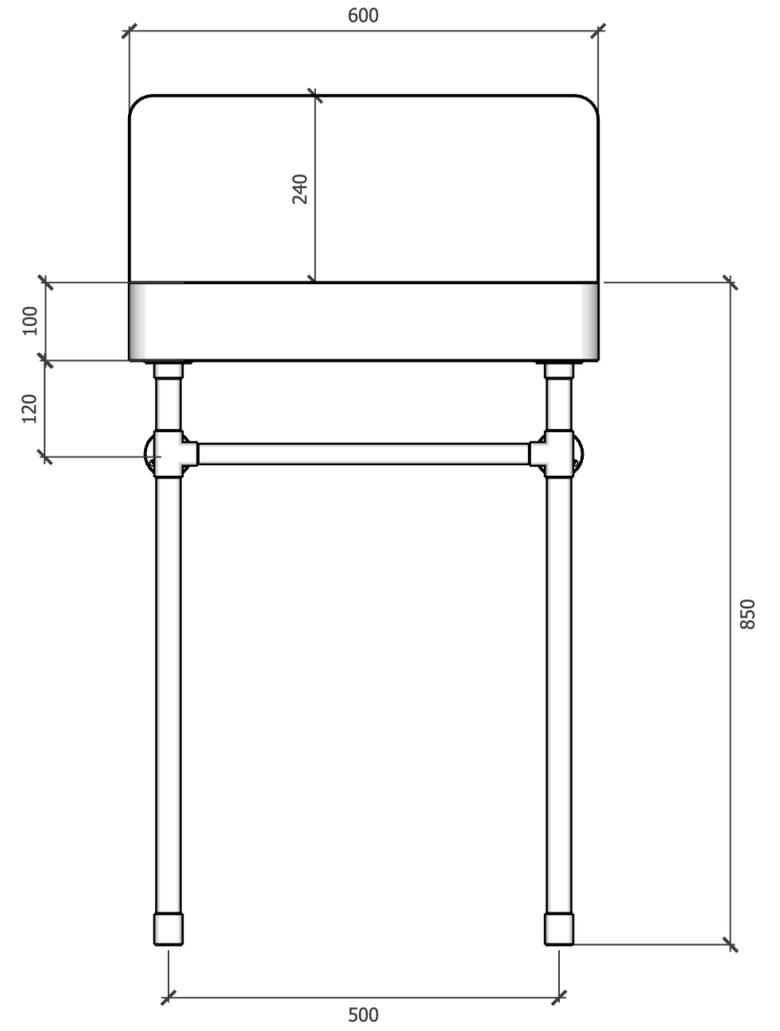

Side View

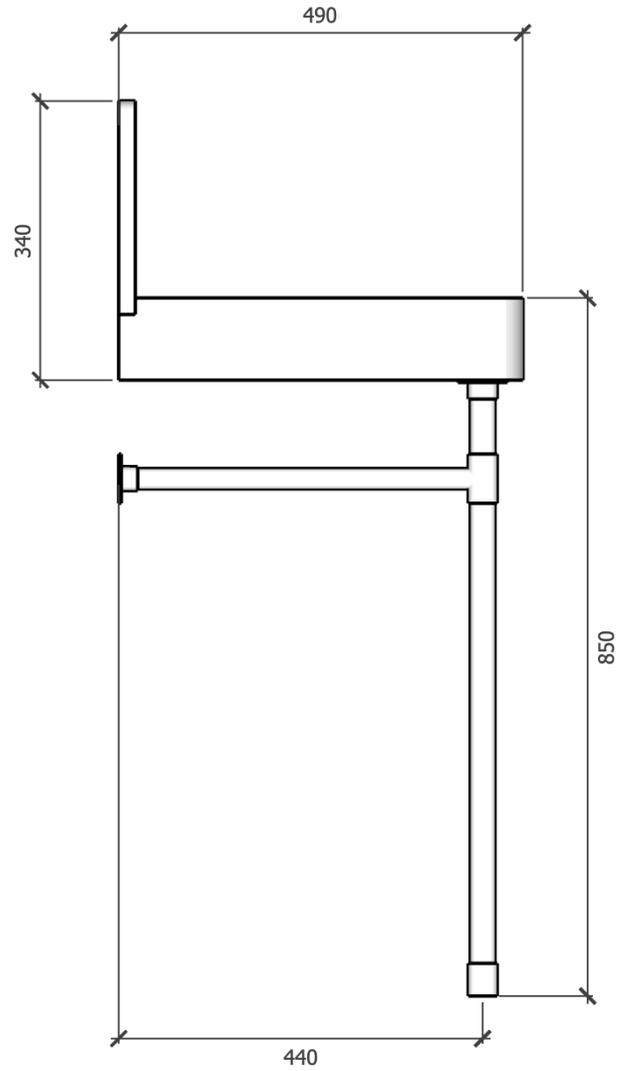

Back View

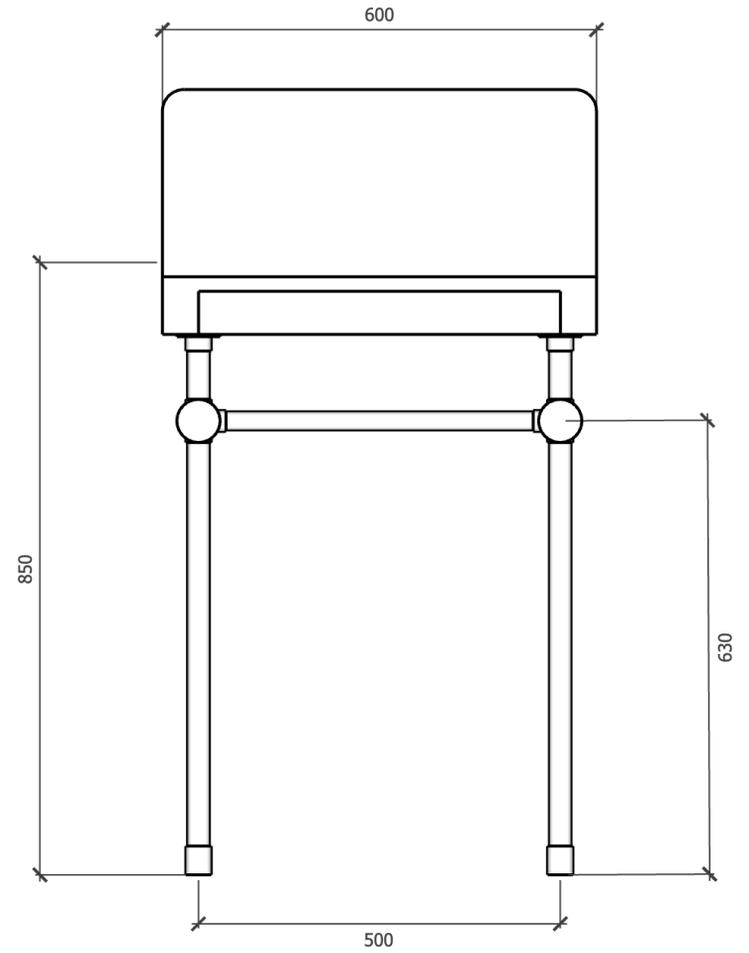

**For assistance or technical questions**  
service@senese.com  
Tel: +39 0577 160 7485  
www.senese.com