

SENESE

Cielo / Cielo Sans Side Lever Gooseneck

Installation Guideline

Senese Srl p.iva 01602790527
Loc. Frassi 34, 53011 Castellin in Chianti
senese.com

Cielo Side Lever Gooseneck

Deck-Mounted One-hole Gooseneck Faucet with Side Lever

Article

Polished Brass LMX01LGCI ON

Polished Chrome LMX01LGCI CR

Aged Brass LMX01LGCI AB

Burnished Brass LMX01LGCI BB

Polished Nickel LMX01LGCI NI

Satin Nickel LMX01LGCI NS

Black Nickel LMX01LGCI NNO

Gold LMX01LGCI OR

Cleaning

Wipe the surface with a soft cloth and lukewarm water and possibly with soap solution. Avoid alkaline, acid-liming or abrasive cleaners. Brass is a material that over time gets a beautiful patina but can be polished with brass polish. Aged and Burnished Brass also gets patina but should not be polished. The galvanized surfaces retain their lustre.

Decalcification

Aerators and shower handles should be regularly decalcified by placing them in a vinegar bath for a couple of hours. Should limescale stains occur, use eucalyptus oil and a soft cloth.

Lubrication

Lubricate only with silicone grease.



Cielo Sans Side Lever Gooseneck

Deck-Mounted One-Hole Gooseneck Faucet with Side Lever

Article

Polished Brass	LMX01LLCI ON
Polished Chrome	LMX01LLCI CR
Aged Brass	LMX01LLCI AB
Burnished Brass	LMX01LLCI BB
Polished Nickel	LMX01LLCI BB
Satin Nickel	LMX01LLCI NS
Black Nickel	LMX01LLCI NNO
Gold	LMX01LLCI OR

Cleaning

Wipe the surface with a soft cloth and lukewarm water and possibly with soap solution. Avoid alkaline, acid-liming or abrasive cleaners. Brass is a material that over time gets a beautiful patina but can be polished with brass polish. Aged and Burnished Brass also gets patina but should not be polished. The galvanized surfaces retain their lustre.

Decalcification

Aerators and shower handles should be regularly decalcified by placing them in a vinegar bath for a couple of hours. Should limescale stains occur, use eucalyptus oil and a soft cloth.

Lubrication

Lubricate only with silicone grease.



Installation Guide

Before You Begin

- 1. Turn off the Water Supply**
Ensure all water supply lines are completely shut off before beginning installation.
- 2. Flush Supply Lines**
Run water through the supply lines to clear any debris or sediment. This prevents blockages or damage to internal components of the fixture.
- 3. Isolation Valves**
We recommend installing isolation valves on the hot and cold inlet feeds for easier future maintenance.

Installation Steps:

Position and Secure the Faucet

- Insert the spout shank through the central hole on the mounting surface. Ensure the gasket is beneath the escutcheon.
- Required hole diameter: 30 mm.
- Secure using the rubber washer, metal washer, and nut beneath the surface. Do not overtighten.

Connect the Water Supply

- Thread the flexible hoses onto the faucet body tighten securely. Use the provided rubber washer for a proper seal.
- Attach the flexible hoses to the respective hot and cold-water supply. Ensure the connections are tight but avoid over-tightening.

Flush the Faucet


Open the mixer by lifting the handle. Slowly turn on the water supply. Allow water to run for several minutes to flush out any remaining debris.

Check for Leaks

Inspect all connections for leaks. If necessary, re-tighten fittings carefully. Confirm that no water is penetrating around the deck surface, which could cause long-term damage

For assistance or technical questions

service@senese.com
Tel: +39 0577 160 7485
www.senese.com

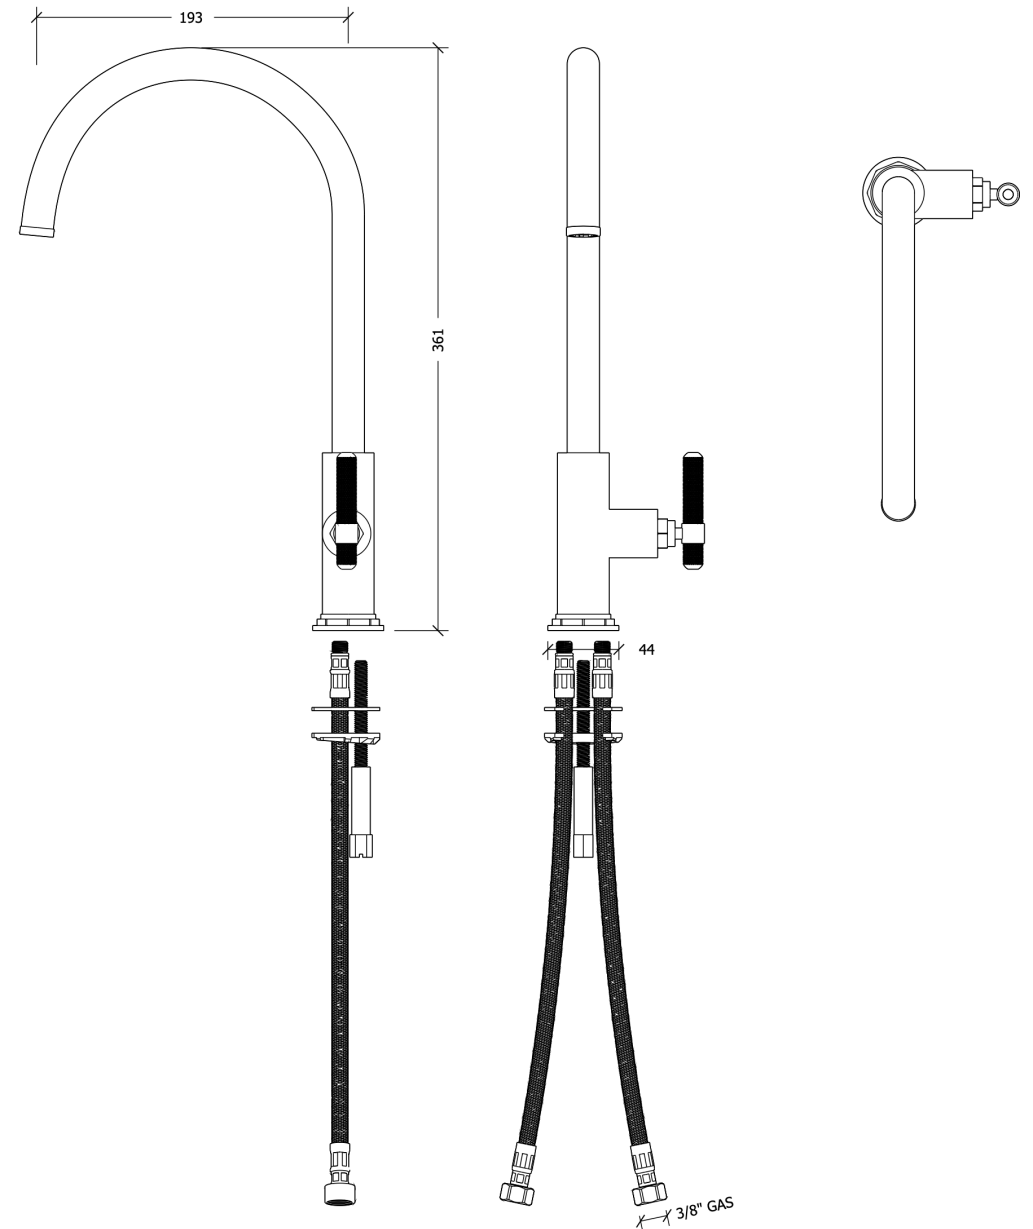

3/8-inch OD compression supply hoses are supplied for installations in the U.S. and Canada