

**SENESE**

**Cielo / Cielo Sans Deck Mounted Basin Mixer**

Installation Guideline

## Cielo Lavatory

### Deck-Mounted One-Hole Lavatory Faucet

#### Article

Polished Brass	LMX06LGCI ON 580 Eur incl. VAT
Polished Chrome	LMX06LGCI CR 695 Eur incl. VAT
Aged Brass	LMX06LGCI AB 750 Eur incl. VAT
Burnished Brass	LMX06LGCI BB 750 Eur incl. VAT
Polished Nickel	LMX06LGCI NI 750 Eur incl. VAT
Satin Nickel	LMX06LGCI NS 840 Eur incl. VAT
Black Nickel	LMX06LGCI NNO 840 Eur incl. VAT
Gold	LMX06LGCI OR 1.050 Eur incl. VAT

#### Cleaning

Wipe the surface with a soft cloth and lukewarm water and possibly with soap solution. Avoid alkaline, acid-liming or abrasive cleaners. Brass is a material that over time gets a beautiful patina but can be polished with brass polish. Aged and Burnished Brass also gets patina but should not be polished. The galvanized surfaces retain their lustre.

#### Decalcification

Aerators and shower handles should be regularly decalcified by placing them in a vinegar bath for a couple of hours. Should limescale stains occur, use eucalyptus oil and a soft cloth.

#### Lubrication

Lubricate only with silicone grease.



## Cielo Sans Lavatory

### Deck-Mounted One-Hole Lavatory Faucet

#### Article

Polished Brass	LMX06LLCS ON 580 Eur incl. VAT
Polished Chrome	LMX06LLCS CR 695 Eur incl. VAT
Aged Brass	LMX06LLCS AB 750 Eur incl. VAT
Burnished Brass	LMX06LLCS BB 750 Eur incl. VAT
Polished Nickel	LMX06LLCS NI 750 Eur incl. VAT
Satin Nickel	LMX06LLCS NS 840 Eur incl. VAT
Black Nickel	LMX06LLCS NNO 840 Eur incl. VAT
Gold	LMX06LLCS OR 1.050 Eur incl. VAT

#### Cleaning

Wipe the surface with a soft cloth and lukewarm water and possibly with soap solution. Avoid alkaline, acid-liming or abrasive cleaners. Brass is a material that over time gets a beautiful patina but can be polished with brass polish. Aged and Burnished Brass also gets patina but should not be polished. The galvanized surfaces retain their lustre.

#### Decalcification

Aerators and shower handles should be regularly decalcified by placing them in a vinegar bath for a couple of hours. Should limescale stains occur, use eucalyptus oil and a soft cloth.

#### Lubrication

Lubricate only with silicone grease.



## Installation Guide

### Before You Begin

- 1. Turn off the Water Supply**  
Ensure all water supply lines are completely shut off before beginning installation.
- 2. Flush Supply Lines**  
Run water through the supply lines to clear any debris or sediment. This prevents blockages or damage to internal components of the fixture.
- 3. Isolation Valves**  
We recommend installing isolation valves on the hot and cold inlet feeds for easier future maintenance.

### Installation Steps:

#### Position and Secure the Faucet

- Insert the spout shank through the central hole on the mounting surface. Ensure the gasket is beneath the escutcheon.
- Required hole diameter: 30 mm.
- Secure using the rubber washer, metal washer, and nut beneath the surface. Do not overtighten.

#### Connect the Water Supply

- Thread the flexible hoses onto the faucet body tighten securely. Use the provided rubber washer for a proper seal.
- Attach the flexible hoses to the respective hot and cold-water supply. Ensure the connections are tight but avoid over-tightening.

#### Flush the Faucet


Open the mixer by lifting the handle. Slowly turn on the water supply. Allow water to run for several minutes to flush out any remaining debris.

#### Check for Leaks

Inspect all connections for leaks. If necessary, re-tighten fittings carefully. Confirm that no water is penetrating around the deck surface, which could cause long-term damage

### For assistance or technical questions

service@senese.com  
Tel: +39 0577 160 7485  
www.senese.com

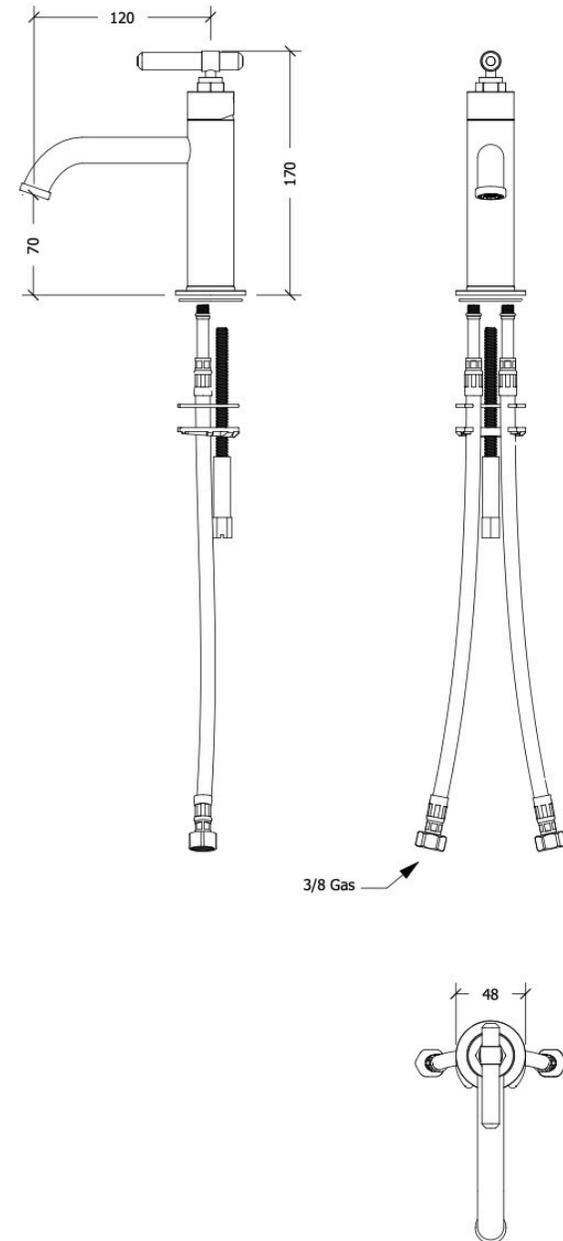

3/8-inch OD compression supply hoses are supplied for installations in the U.S. and Canada