

SENESE

Cielo / Cielo Sans Deck Mounted High Profile Basin Mixer

Installation Guideline

Cielo Lavatory High Profile

Deck-Mounted One-Hole High-Profile Lavatory Faucet

Article

Polished Brass	LMX07LGCI ON 650 Eur incl. VAT
Polished Chrome	LMX07LGCI CR 720 Eur incl. VAT
Aged Brass	LMX07LGCI AB 840 Eur incl. VAT
Burnished Brass	LMX07LGCI BB 840 Eur incl. VAT
Polished Nickel	LMX07LGCI NI 840 Eur incl. VAT
Satin Nickel	LMX07LGCI NS 920 Eur incl. VAT
Black Nickel	LMX07LGCI NNO 920 Eur incl. VAT
Gold	LMX07LGCI OR 1.150 Eur incl. VAT

Cleaning

Wipe the surface with a soft cloth and lukewarm water and possibly with soap solution. Avoid alkaline, acid-liming or abrasive cleaners. Brass is a material that over time gets a beautiful patina but can be polished with brass polish. Aged and Burnished Brass also gets patina but should not be polished. The galvanized surfaces retain their lustre.

Decalcification

Aerators and shower handles should be regularly decalcified by placing them in a vinegar bath for a couple of hours. Should limescale stains occur, use eucalyptus oil and a soft cloth.

Lubrication

Lubricate only with silicone grease.



Cielo Sans Lavatory High Profile

Deck-Mounted One-Hole High-Profile Lavatory Faucet

Article

Polished Brass	LMX07LLCS ON 650 Eur incl. VAT
Polished Chrome	LMX07LLCS CR 720 Eur incl. VAT
Aged Brass	LMX07LLCS AB 840 Eur incl. VAT
Burnished Brass	LMX07LLCS BB 840 Eur incl. VAT
Polished Nickel	LMX07LLCS NI 840 Eur incl. VAT
Satin Nickel	LMX07LLCS NS 920 Eur incl. VAT
Black Nickel	LMX07LLCS NNO 920 Eur incl. VAT
Gold	LMX07LLCS OR 1.150 Eur incl. VAT

Cleaning

Wipe the surface with a soft cloth and lukewarm water and possibly with soap solution. Avoid alkaline, acid-liming or abrasive cleaners. Brass is a material that over time gets a beautiful patina but can be polished with brass polish. Aged and Burnished Brass also gets patina but should not be polished. The galvanized surfaces retain their lustre.

Decalcification

Aerators and shower handles should be regularly decalcified by placing them in a vinegar bath for a couple of hours. Should limescale stains occur, use eucalyptus oil and a soft cloth.

Lubrication

Lubricate only with silicone grease.



Installation Guide

Before You Begin

- 1. Turn off the Water Supply**
Ensure all water supply lines are completely shut off before beginning installation.
- 2. Flush Supply Lines**
Run water through the supply lines to clear any debris or sediment. This prevents blockages or damage to internal components of the fixture.
- 3. Isolation Valves**
We recommend installing isolation valves on the hot and cold inlet feeds for easier future maintenance.

Installation Steps:

Positioning and Securing the Faucet

- Insert the spout shank through the central hole on the mounting surface. Ensure the gasket is beneath the escutcheon.
- Required hole diameter: 30 mm.
- Secure using the rubber washer, metal washer, and nut beneath the surface. Do not overtighten.

Connecting Water Supply


- Thread the flexible hoses onto the faucet body tighten securely. Use the provided rubber washer for a proper seal.
- Attach the flexible hoses to the respective hot and cold-water supply. Ensure the connections are tight but avoid over-tightening.

Testing

- Open the faucet and turn the water supply back on.
- Allow water to run through the faucet to flush out any remaining debris.
- Check for any leaks around the connections and handle assembly. Tighten any loose connections as needed.

For assistance or technical questions

service@senese.com
Tel: +39 0577 160 7485
www.senese.com

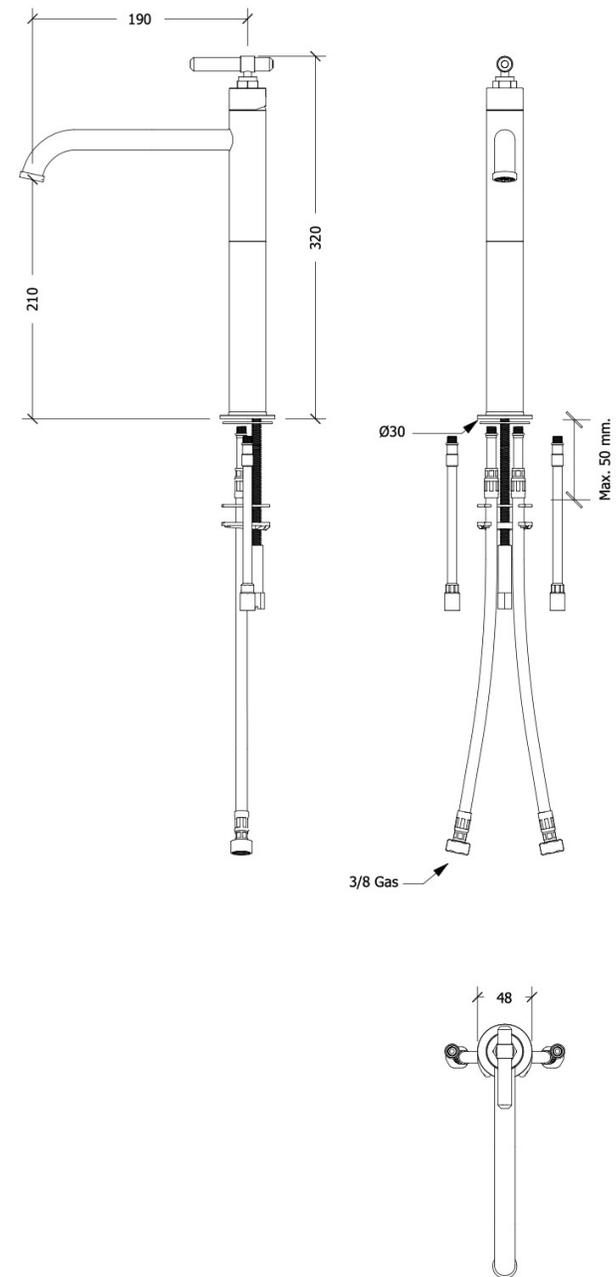

3/8-inch OD compression supply hoses are supplied for installations in the U.S. and Canada