

SENESE

Cielo Sans Progressive Kitchen Set

Installation Guideline

Senese Srl p.iva 01602790527
Loc. Frassi 34, 53011 Castellina in Chianti
senese.com

Cielo Sans Progressive Set

Deck-Mounted One-Hole Progressive Gooseneck Faucet and Rinse

Article

Polished Brass	LMXP01DLLCI ON
Polished Chrome	LMXP01DLLCI CR
Aged Brass	LMXP01DLLCI AB
Burnished Brass	LMXP01DLLCI BB
Polished Nickel	LMXP01DLLCI NI
Satin Nickel	LMXP01DLLCI NS
Black Nickel	LMXP01DLLCI NNO
Gold	LMXP01DLLCI OR

Progressive Function

The Cielo Sans is equipped with a progressive cartridge.

- Rotation controls both flow and temperature.
- Initial rotation activates cold water.
- Continued rotation increases temperature gradually to full hot.
- Flow rate increases progressively through rotation.

Cleaning

Wipe the surface with a soft cloth and lukewarm water and possibly with soap solution. Avoid alkaline, descaling or abrasive cleaners. Brass is a material that over time gets a beautiful patina but can be polished with brass polish. Aged and Burnished Brass also gets patina but should not be polished. The galvanized surfaces retain their lustre.

Decalcification

Aerators and shower handles should be regularly decalcified by placing them in a vinegar bath for a couple of hours. Should limescale stains occur, use eucalyptus oil and a soft cloth.

Lubrication

Lubricate only with silicone grease.



Installation Guide

Before Installation

Shut Off Water Supply

Close the hot and cold-water supply valves completely before beginning installation.

Flush Supply Lines

Open both supply lines briefly to flush out debris or sediment. This protects the progressive cartridge and diverter from damage.

Installation Requirements

- Mounting hole diameter: 30 mm
- Maximum countertop thickness: 80 mm

Installation Steps

Install the Main Faucet

- Ensure the position of the o-ring under the escursion plate base.
- Position the faucet on top of the escursion base
- From below the countertop, connect the threaded shank to the faucet body.
- Thread the fixing nut onto the shank and tighten evenly.
- Do not overtighten.

Install the Shut-Off Rinse

- Ensure the position of the o-ring under the escursion plate base and place it.
- From below, position the washer and secure with the fixing nut and tighten firmly.
- Connect the flexible hose from the rinse to the diverter outlet.
- Ensure the hose moves freely without kinking or tension.
- Connect the diverter inlet to the designated outlet port on the faucet body.
- Ensure all connections are properly seated and secured.

Connect Water Supply


- Connect the hot and cold flexible hoses to the corresponding supply valves (3/8" BSP).
- Ensure hot is connected to the left inlet and cold to the right.
- Tighten securely but do not overtighten.

System Start-Up and Testing

- Remove the aerator from the spout.
- Allow water to run for several minutes to flush the system.
- Check all connections carefully for leaks.
- Reinstall the aerator once flushing is complete.

For assistance or technical questions

service@senese.com
Tel: +39 0577 160 7485
www.senese.com

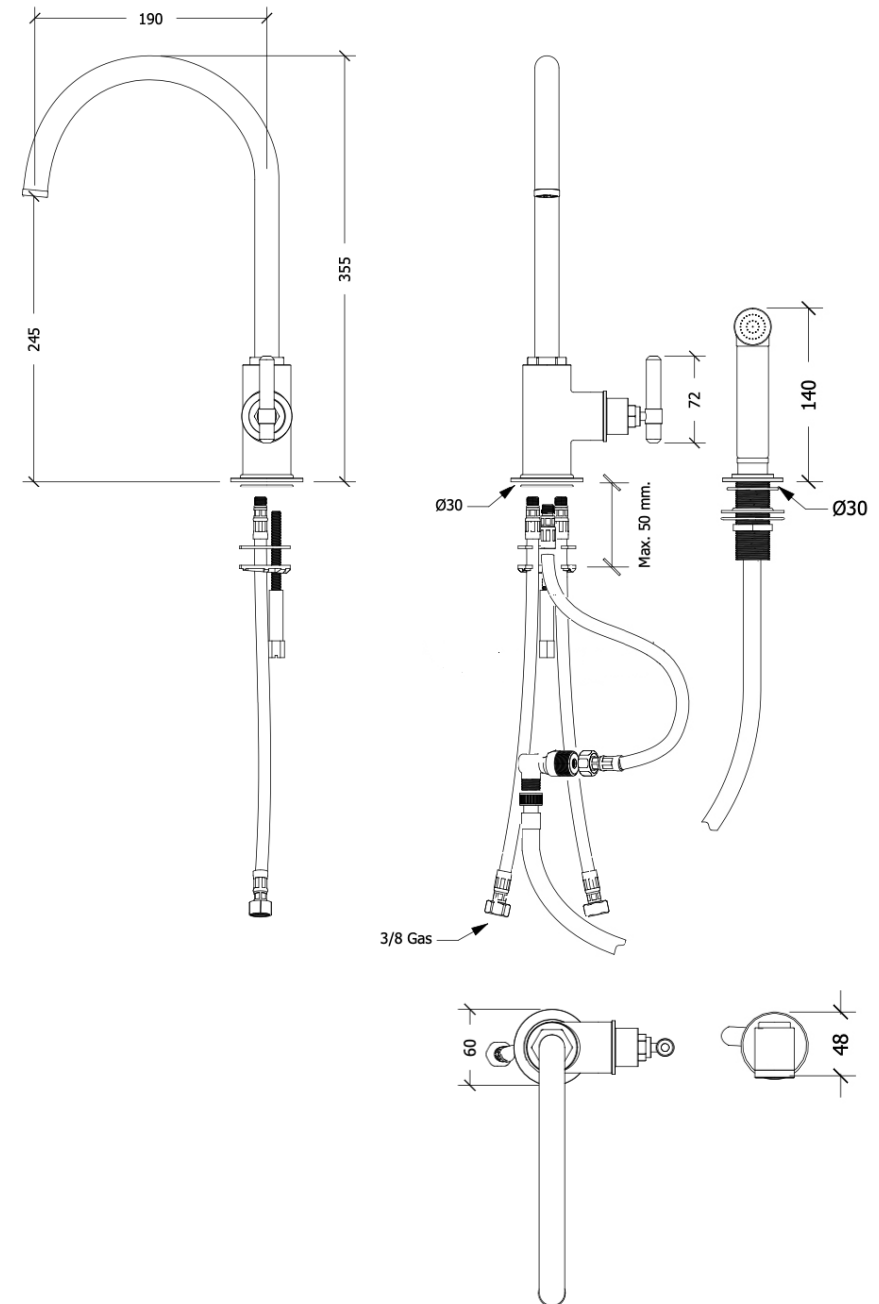

3/8-inch OD compression supply hoses are supplied for installations in the U.S. and Canada