

SENESE

Cielo / Cielo Sans Deck Mounted Basin Faucet

Installation Guideline

Senese Srl p.iva 01602790527
Loc. Frassi 34, 53011 Castellin in Chianti
senese.com

Cielo Three Hole Low Profile

Deck-Mounted Three-hole Lavatory Faucet

Article

Polished Brass	LT05LGCI ON 595 Eur incl. VAT
Polished Chrome	LT05LGCI CR 710 Eur incl. VAT
Aged Brass	LT05LGCI AB 760 Eur incl. VAT
Burnished Brass	LT05LGCI BB 760 Eur incl. VAT
Polished Nickel	LT05LGCI NI 760 Eur incl. VAT
Satin Nickel	LT05LGCI NS 880 Eur incl. VAT
Black Nickel	LT05LGCI NNO 880 Eur incl. VAT
Gold	LT05LGCI OR 1.060 Eur incl. VAT

Cleaning

Wipe the surface with a soft cloth and lukewarm water and possibly with soap solution. Avoid alkaline, acid-liming or abrasive cleaners. Brass is a material that over time gets a beautiful patina but can be polished with brass polish. Aged and Burnished Brass also gets patina but should not be polished. The galvanized surfaces retain their lustre.

Decalcification

Aerators and shower handles should be regularly decalcified by placing them in a vinegar bath for a couple of hours. Should limescale stains occur, use eucalyptus oil and a soft cloth.

Lubrication

Lubricate only with silicone grease.



Cielo Sans Three Hole Low Profile

Deck-Mounted Three-Hole Lavatory Faucet

Article

Polished Brass	LT05LLCS ON 595 Eur incl. VAT
Polished Chrome	LT05LLCS CR 710 Eur incl. VAT
Aged Brass	LT05LLCS AB 760 Eur incl. VAT
Burnished Brass	LT05LLCS BB 760 Eur incl. VAT
Polished Nickel	LT05LLCS NI 760 Eur incl. VAT
Satin Nickel	LT05LLCS NS 880 Eur incl. VAT
Black Nickel	LT05LLCS NNO 880 Eur incl. VAT
Gold	LT05LLCS OR 1.060 Eur incl. VAT

Cleaning

Wipe the surface with a soft cloth and lukewarm water and possibly with soap solution. Avoid alkaline, acid-liming or abrasive cleaners. Brass is a material that over time gets a beautiful patina but can be polished with brass polish. Aged and Burnished Brass also gets patina but should not be polished. The galvanized surfaces retain their lustre.

Decalcification

Aerators and shower handles should be regularly decalcified by placing them in a vinegar bath for a couple of hours. Should limescale stains occur, use eucalyptus oil and a soft cloth.

Lubrication

Lubricate only with silicone grease.



Installation Guide

Before You Begin

1. Turn off the Water Supply

Ensure all water supply lines are completely shut off before beginning installation.

2. Flush Supply Lines

Run water through the supply lines to clear any debris or sediment. This prevents blockages or damage to internal components of the fixture.

3. Isolation Valves

We recommend installing isolation valves on the hot and cold inlet feeds for easier future maintenance.

Installation Steps:

Positioning the Faucet

- Insert the spout shank through the central hole on the mounting surface. Ensure the gasket is beneath the escutcheon.
- Secure the spout by threading the washers and tightening the nut underneath.
- Required hole diameter: 30 mm.
- Recommended centre-to-centre distance: 100 mm.
- Maximum distance between components: 400 mm.

Installing the Handles


- Insert each handle body through its corresponding hole on the mounting surface.
- Secure using the rubber washer, metal washer, and nut beneath the surface.
- Ensure the handles are aligned correctly for smooth operation.

Connecting Water Supply

- Thread the tee fitting onto the spout shank and tighten securely. Use the provided rubber washer for a proper seal.
- Attach the flexible hoses to the tee and handles. Ensure the connections are tight but avoid over-tightening.

Testing

- Open the faucet and turn the water supply back on.
- Allow water to run through the faucet to flush out any remaining debris.
- Check for any leaks around the connections and handle assembly. Tighten any loose connections as needed.

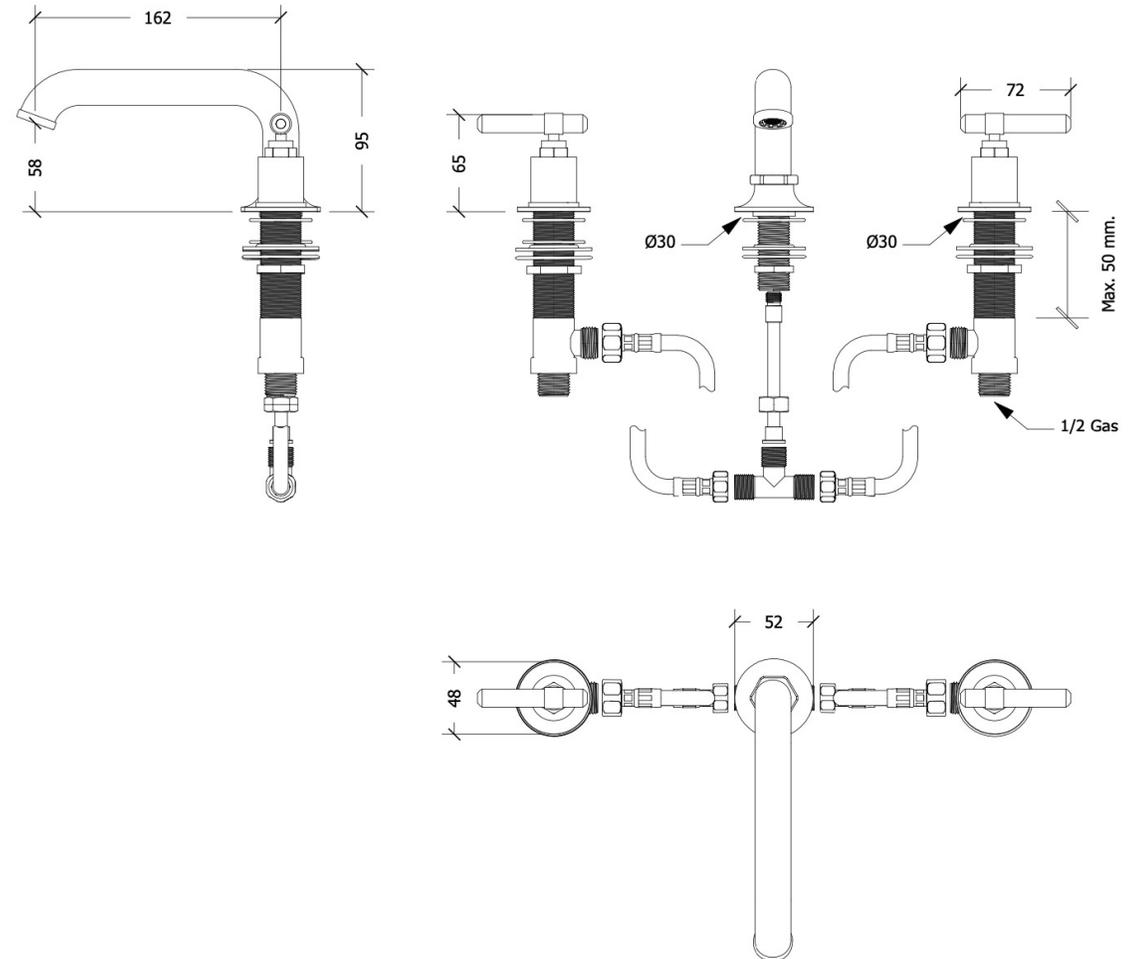

Flowchart
LT05LGCI / LT05LLCS

For assistance or technical questions

service@senese.com
Tel: +39 0577 160 7485
www.senese.com

