

# SENESE

Cielo / Cielo Sans Thermostatic Shower Set

Installation Guideline

Cielo Thermostatic Shower Set

Thermostatic Shower Set with 2-way Diverter

Article

|                 |                 |
|-----------------|-----------------|
| Polished Brass  | TDS200RLGCI ON  |
| Polished Chrome | TDS200RLGCI CR  |
| Aged Brass      | TDS200RLGCI AB  |
| Burnished Brass | TDS200RLGCI BB  |
| Polished Nickel | TDS200RLGCI NI  |
| Satin Nickel    | TDS200RLGCI NS  |
| Black Nickel    | TDS200RLGCI NNO |
| Gold            | TDS200RLGCI OR  |



Cielo Sans Thermostatic Shower Set

Thermostatic Shower Set with 2-Way Diverter

Article

Polished BrassTDS200RLLCS ON

Polished ChromeTDS200RLLCS CR

Aged BrassTDS200RLLCS AB

Burnished BrassTDS200RLLCS BB

Polished NickelTDS200RLLCS NI

Satin NickelTDS200RLLCS NS

Black NickelTDS200RLLCS NNO

GoldTDS200RLLCS OR



## Installation Guide

### Before You Begin:

- 1. Turn off the Water Supply**  
Ensure all water supply lines are completely shut off before beginning installation.
- 2. Flush Supply Lines**  
Run water through the supply lines to clear any debris or sediment. This prevents blockages or damage to internal components of the fixture.
- 3. Isolation Valves**  
We recommend installing isolation valves on the hot and cold inlet feeds for easier future maintenance.

### Installation Steps:

#### Mount the Thermostatic Body

- Use the provided drawings to position the body **at the correct tolerance** relative to the finished wall surface.

#### Connecting the Water Supply

- Connect the hot and cold-water lines to the designated inlets. **Ensure the hot line is connected on the left** when viewed from the front.

#### Connect the Shower Rose and Hand Shower


- Top Outlet:** Connect to the shower rose.
- Right Outlet:** Connect to the hand shower.
- Tighten all connections securely to prevent leaks.

#### Mount the Plate and Secure the Handles

- Attach the diverter and thermostatic bodies by screwing them into place.
- Carefully mount the cover plate over the valve bodies. Apply a thin bead of silicone behind the cover plate and press it flush against the wall.
- Mount the escutcheon plates on the faucet bodies and push them flush against the cover plate.
- Attach the back part of the faucet handles by threading them onto the respective valve stems.

### Testing

- Open the faucet and turn the water supply back on.
- Allow water to run through the faucet to flush out any remaining debris.
- Check for any leaks around the handle assembly.

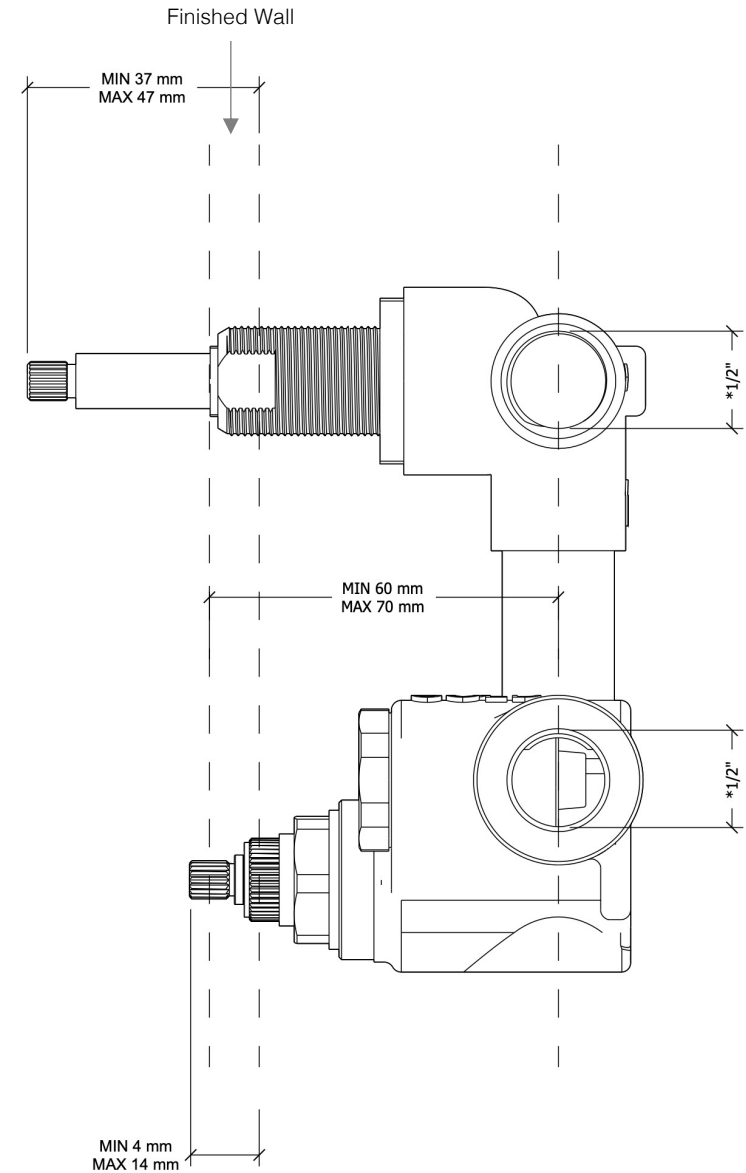

## Post-Installation Care

### Cleaning and Maintenance




Regularly clean the faucet surface with a soft cloth, lukewarm water, and mild soap. Avoid using harsh chemicals or abrasive materials. For brass finishes, use brass polish to maintain shine, except for aged or burnished brass which should not be polished.

### Aerator and Shower Handle Decalcification

To prevent limescale buildup, immerse aerators and shower handles in vinegar for a few hours, then rinse. Use eucalyptus oil on a soft cloth to remove limescale stains.

### Lubrication

Use only silicone grease for lubrication when needed.

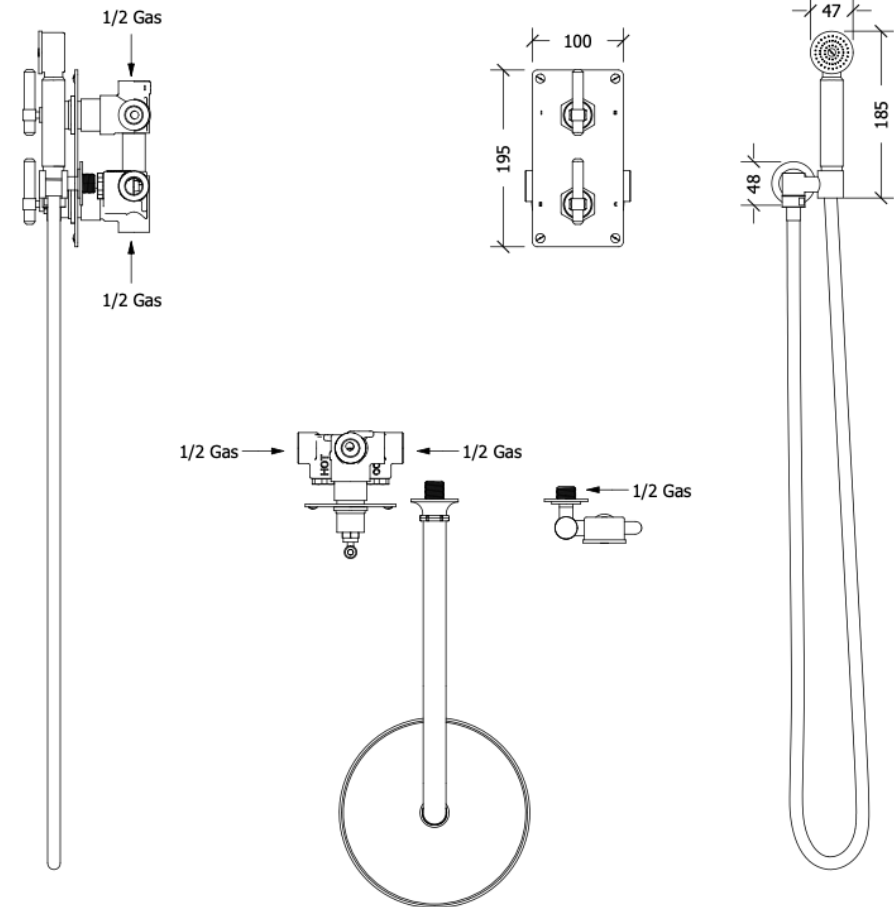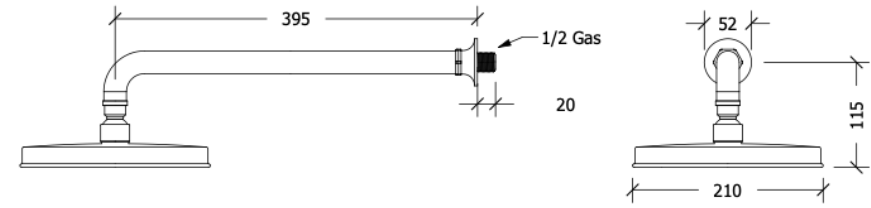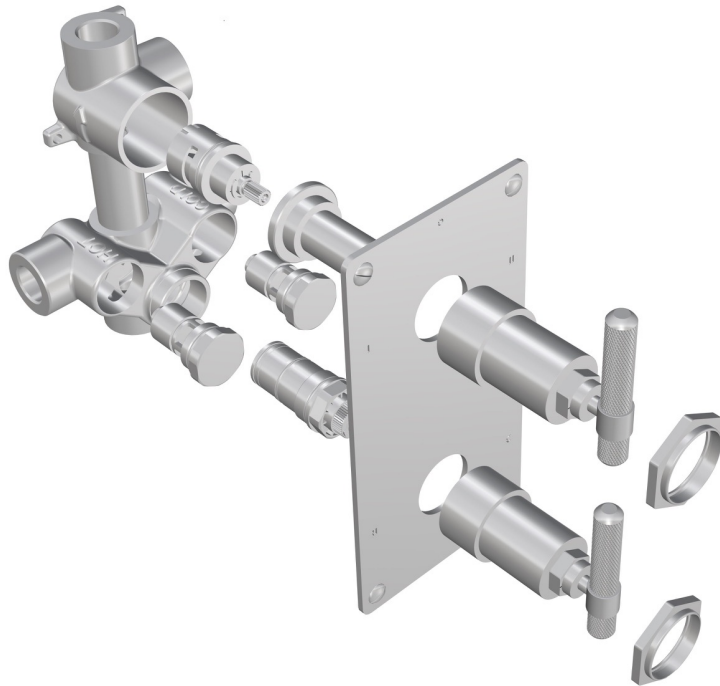

For assistance or technical questions

service@senese.com  
Tel: +39 0577 160 7485  
www.senese.com

