

SENESE

Cielo / Cielo Sans Thermostatic Shower

Installation Guideline

Cielo Thermostatic Shower Plate

Thermostatic Shower Plate with 2-way Deviation Control

Article	
Polished Brass	TERPRLGCI ON
Polished Chrome	TERPRLGCI CR
Aged Brass	TERPRLGCI AB
Burnished Brass	TERPRLGCI BB
Polished Nickel	TERPRLGCI NI
Satin Nickel	TERPRLGCI NS
Black Nickel	TERPRLGCI NNO
Gold	TERPRLGCI OR



Cielo Sans Thermostatic Shower Plate

Thermostatic Shower Plate with 2-way Deviation Control

Article	
Polished Brass	TERRDLLCS ON
Polished Chrome	TERRDLLCS CR
Aged Brass	TERRDLLCS AB
Burnished Brass	TERRDLLCS BB
Polished Nickel	TERRDLLCS NI
Satin Nickel	TERRDLLCS NS
Black Nickel	TERRDLLCS NNO
Gold	TERRDLLCS OR



Installation Guide

Before You Begin:

1. Turn off the Water Supply

Ensure all water supply lines are completely shut off before beginning installation.

2. Flush Supply Lines

Run water through the supply lines to clear any debris or sediment. This prevents blockages or damage to internal components of the fixture.

3. Isolation Valves

We recommend installing isolation valves on the hot and cold inlet feeds for easier future maintenance.

Installation Steps:

Mount the Thermostatic Body

- Use the provided drawings to position the body **at the correct tolerance** relative to the finished wall surface.

Connecting the Water Supply

- Connect the hot and cold-water lines to the designated inlets. **Ensure the hot line is connected on the left** when viewed from the front.

Connect the Shower Rose and Hand Shower


- Top Outlet:** Connect to the shower rose.
- Right Outlet:** Connect to the hand shower.
- Tighten all connections securely to prevent leaks.

Mount the Plate and Secure the Handles

- Attach the diverter and thermostatic bodies by screwing them into place.
- Carefully mount the cover plate over the valve bodies. Apply a thin bead of silicone behind the cover plate and press it flush against the wall.
- Mount the escutcheon plates on the faucet bodies and push them flush against the cover plate.
- Attach the back part of the faucet handles by threading them onto the respective valve stems.

Testing

- Open the faucet and turn the water supply back on.
- Allow water to run through the faucet to flush out any remaining debris.
- Check for any leaks around the handle assembly.

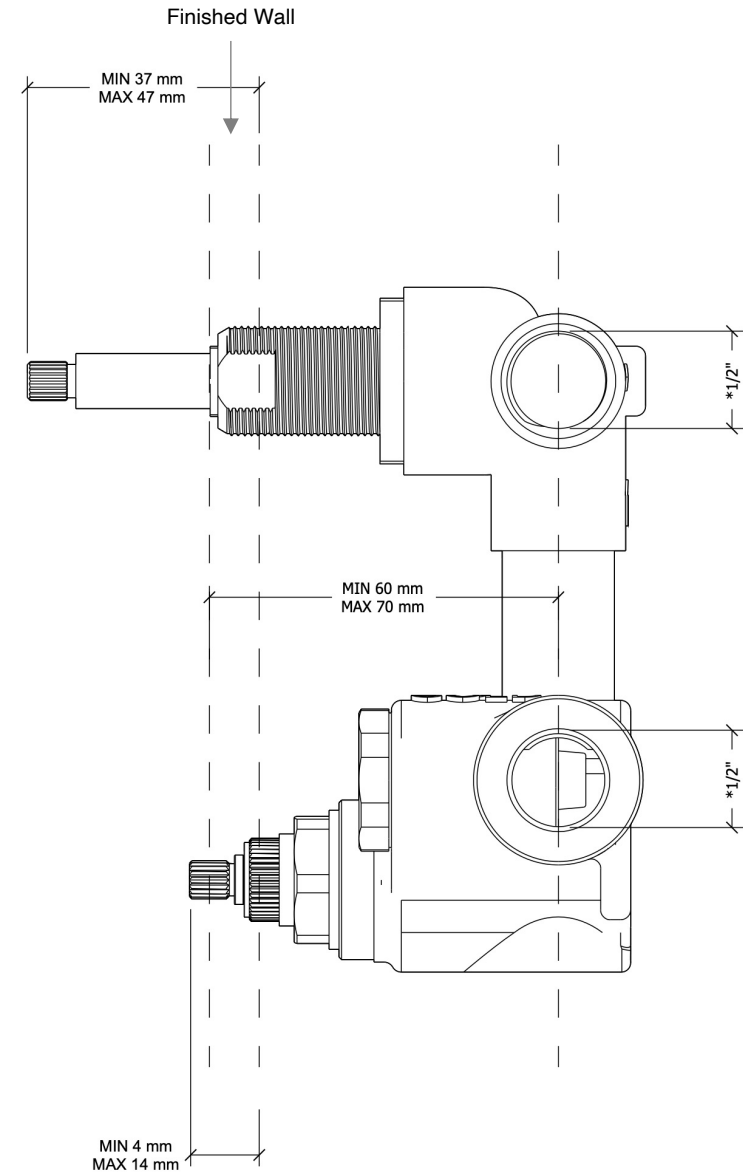

Post-Installation Care

Cleaning and Maintenance


Regularly clean the faucet surface with a soft cloth, lukewarm water, and mild soap. Avoid using harsh chemicals or abrasive materials. For brass finishes, use brass polish to maintain shine, except for aged or burnished brass which should not be polished.

Aerator and Shower Handle Decalcification

To prevent limescale buildup, immerse aerators and shower handles in vinegar for a few hours, then rinse. Use eucalyptus oil on a soft cloth to remove limescale stains.

Lubrication

Use only silicone grease for lubrication when needed.

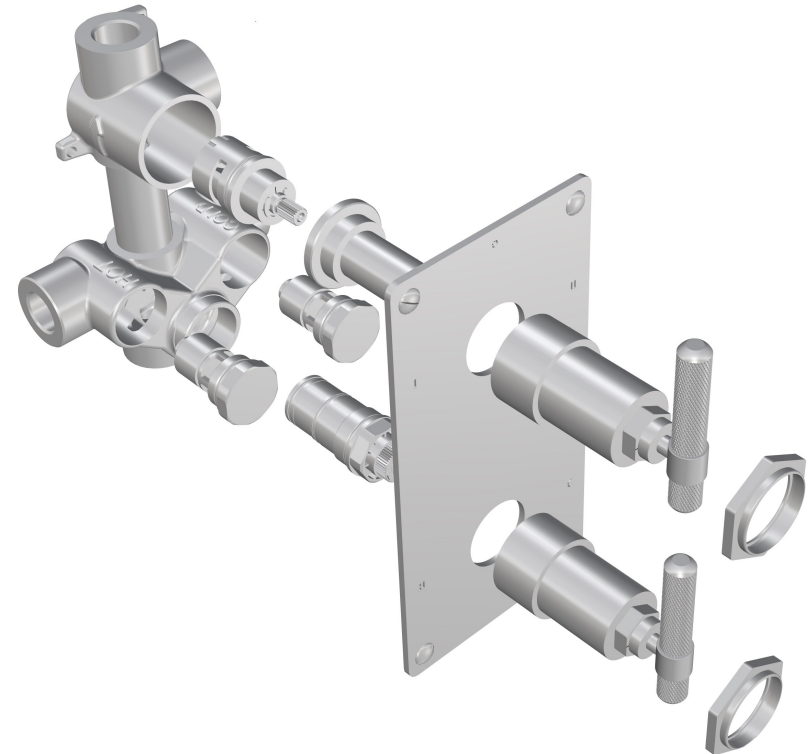

For assistance or technical questions

service@senese.com
Tel: +39 0577 160 7485
www.senese.com

