

**SENESE**

**Wall Hung Basin**

Installation Guideline

**senese.com**

Senese Srl p.iva 01602790527  
Loc. Frassi 34, 53011 Castellin in Chianti

## Wall Hung Basin


### Wall Hung Basin Sink in Marble

#### Article

Verde Guatemala	WHSSKVG 500
Emperador	WHSSKE 500
Arabescato Vagli	WHSSKAR 500

#### Cleaning

Clean surface with a non-abrasive, mild soap or PH neutral cleanser. Do not use bleach, abrasive cleaners, ammonia, vinegar, alcohol, window cleaners or lemon juice. In addition, do not use abrasive cleaning pads, steel wool, metal brushes or scouring pads. Over time water can leave behind mineral deposits. When installing drains and fittings on marble countertops only use 100% silicone or marble safe plumber sealers. The use of incorrect sealer will result in stained marble and void the warranty.

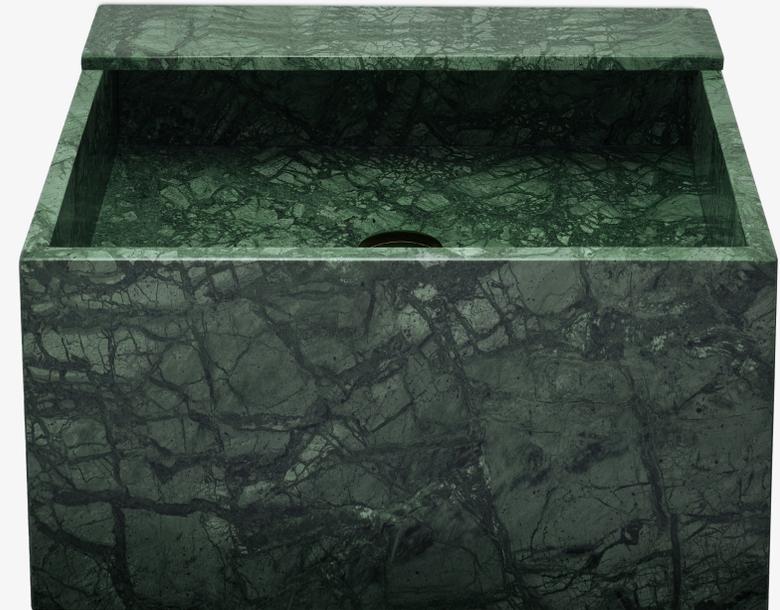

## Wall Hung Basin

### Wall Hung Basin Sink in Marble

#### Article

Verde Guatemala WHSSKVG 500

Emperador WHSSKE 500

Arabescato Vagli WHSSKAR 500

#### Cleaning

Clean surface with a non-abrasive, mild soap or PH neutral cleanser. Do not use bleach, abrasive cleaners, ammonia, vinegar, alcohol, window cleaners or lemon juice. In addition, do not use abrasive cleaning pads, steel wool, metal brushes or scouring pads. Over time water can leave behind mineral deposits. When installing drains and fittings on marble countertops only use 100% silicone or marble safe plumber sealers. The use of incorrect sealer will result in stained marble and void the warranty.



## Wall Hung Basin

### Wall Hung Basin Sink in Marble

#### Article

Verde Guatemala	WHSSKVG 500
Emperador	WHSSKE 500
Arabescato Vagli	WHSSKAR 500

#### Cleaning

Clean surface with a non-abrasive, mild soap or PH neutral cleanser. Do not use bleach, abrasive cleaners, ammonia, vinegar, alcohol, window cleaners or lemon juice. In addition, do not use abrasive cleaning pads, steel wool, metal brushes or scouring pads. Over time water can leave behind mineral deposits. When installing drains and fittings on marble countertops only use 100% silicone or marble safe plumber sealers. The use of incorrect sealer will result in stained marble and void the warranty.



## Installation Instructions

### Preparation

- Ensure the wall is structurally sound and can support the weight of the basin, 40 kg

### Mounting the Brackets

- Secure the wall-mounting brackets at the desired height.  
The brackets must be installed **120 mm below** the intended height of the upper edge of the basin.
- Use suitable **M8 anchoring screws**, appropriate for your wall type.
- Use a level to ensure the brackets are perfectly aligned and positioned **240 mm apart**, measured from the **inner sides** of the brackets.


### Placing the Sink

- Apply a **thin bead of silicone** on top of each bracket and along the area where the sink meets the wall.
- Carefully position the sink on top of the brackets, ensuring alignment.


### Installing the Drain

- Attach and secure the drain fittings.
- Ensure a watertight seal.
- If silicone is used for sealing only use 100% silicone or a marble-safe plumber's sealer to prevent staining.


Top View

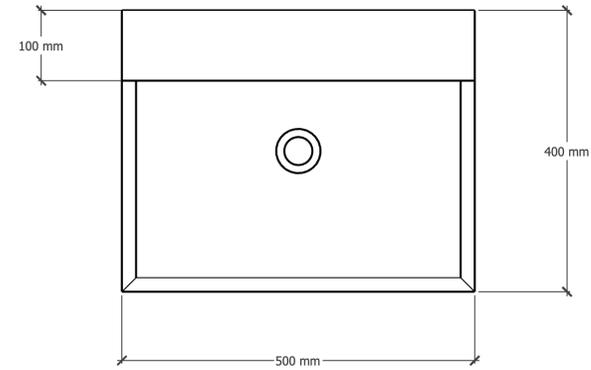


Front View

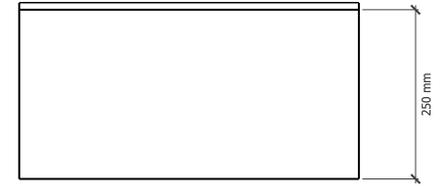



Back View

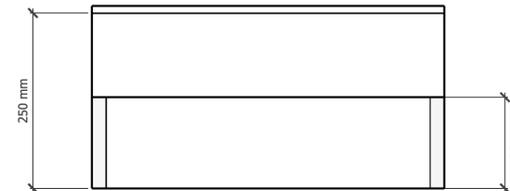

Side View - Section

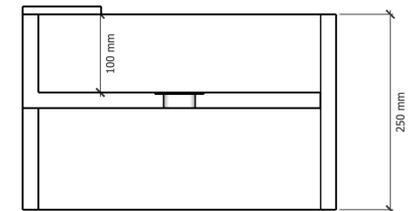

Wall Mounting Bracket Dry Wall

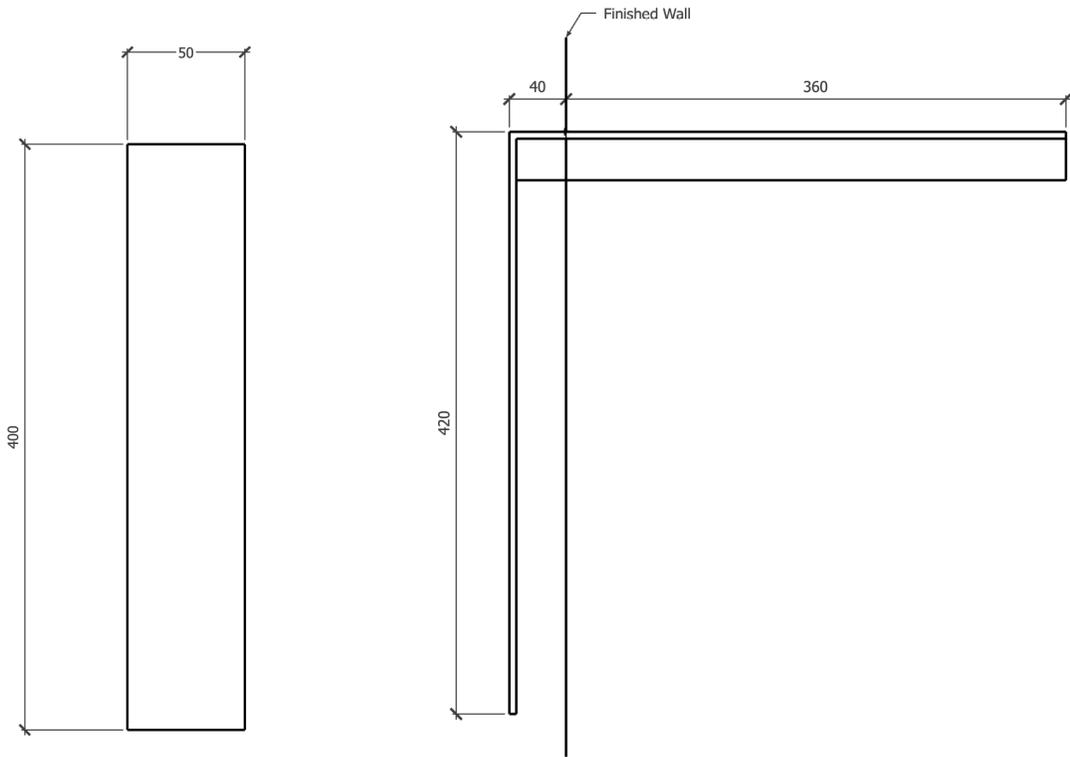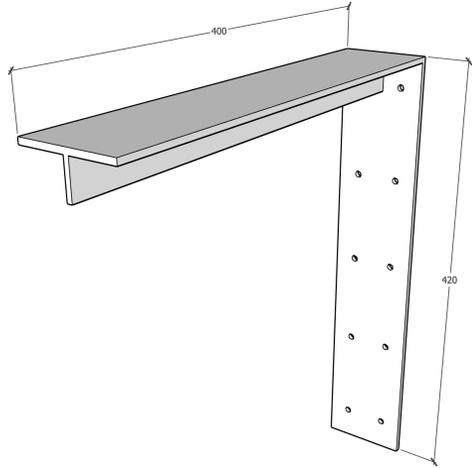

Wall Mounting Bracket Masonry

